



# [promultis]

## outdoorscreen



## USER'S MANUAL

### CAUTION

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This User's Manual includes detailed usage instructions for your product.
- Please read this manual thoroughly.
- Figures and illustrations in this User Manual are provided for reference only and may differ from actual equipment appearance. Equipment design and specifications may be changed without notice.
- Due to the processes required for manufacturing a large format Projected Capacitive product Promultis will only accept warranty requests for units that have a blemish, mark or smear on the touch skin that is 5% or larger than the total interactive area.



**[promultis]**  
MULTITOUCH SOLUTIONS

For more exciting multitouch products visit  
[www.promultis.info](http://www.promultis.info)  
or call +44 (0) 239 251 2794



## 1. Start up and shut down


1. The unit is plug and play.
2. Connect the plug into socket and switch on.
3. The screen will automatically power up directly into Windows.
4. All settings and applications can be accessed via the touch screen.



## 2. Screen Cleaning

Over time and use the screen will become tarnished with finger prints; to clean a mist spray class cleaner/de greaser should be used.

Any excess fluid should be mopped up with a liquid absorbent cloth prior to cleaning.

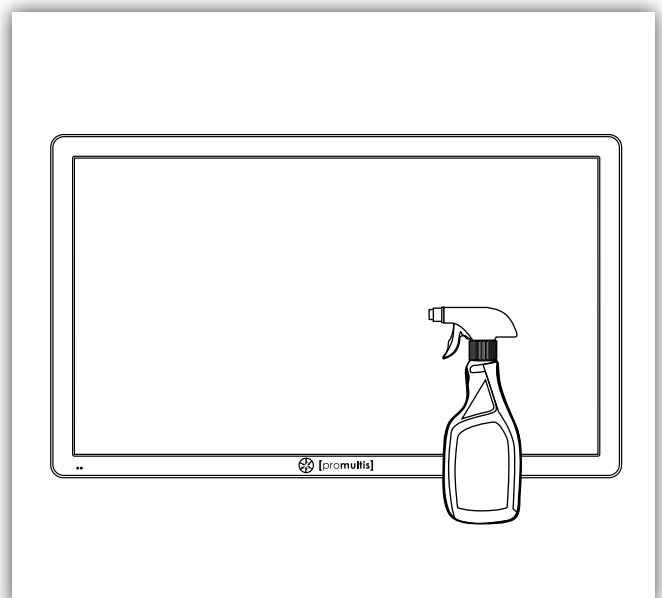

### 3. Outdoor screen interior








## 1. Connecting Digital Signage Player

1. To initiate touch on the screen the unit requires to be connected to an appropriate Player.
2. Connect the Device into the power socket and switch on.
3. Connect a USB cable to the unit slot and the Device's USB slot
4. Connect a HDMI cable to the unit slot and the Device's HDMI slot.
5. The screen should then have enabled touch.

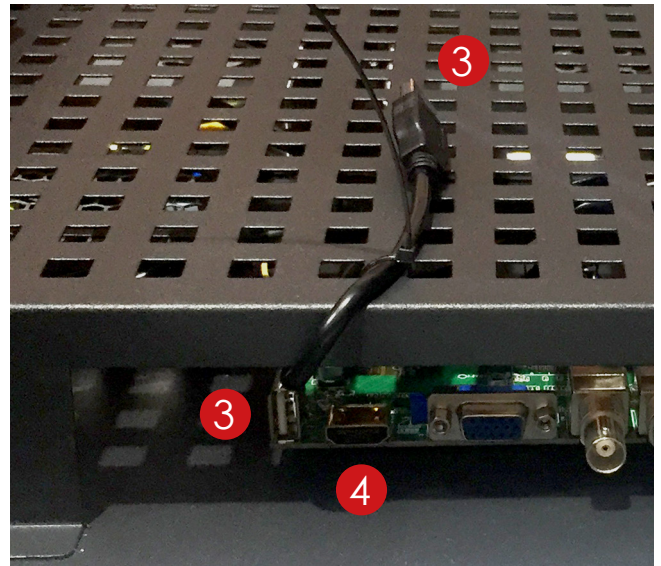

## 5. Timer controller



### Step 1

Press the button "reset/recall" 4 times, then the "lock" symbol will disappear.



### Step 2

Press the button "hour", then press the button "week", "hour", "minute", adjust to current time, then press button "clock", then it will display the current time.



### Step 3

Press button "timer", then the screen will display "1NO" on the screen (means the first time to turn on), then press button "week", "hour", "minute" to setting the time to turn on.



### Step 4

Again press button "timer", then the screen will display "1OFF", (means the first time to turn off), then press "week", "hour", "minute" to setting the time to turn off.

## 5. Timer controller



### Step 5

Again press button "timer", then the screen will display 2ON, 2OFF, 3ON, 3OFF.....7ON, 7OFF, you can follow these steps to setting the time to turn on/off.



### Step 6

Timer setting finished, then press button "clock", then the screen will display the current time, NOTE: if you do not press "clock", it will go back to clock pattern after 30 seconds.