

Totem Engage

The Totem Engage is a PCAP Touch Totem featuring 10 touch points, powered by Android 13 OS. Available in 55" and 65".



Note: Product design specifications including dimensions are subject to change without notice & may vary from those shown. Please call us for the most up to date specifications and dimensions.



[promultis]

For more exciting multitouch products visit

www.promultis.info

or call +44 (0) 239 251 2794



Getting Started

Included in your product box:



Power Cable



Remote



Manual



[promultis]

For more exciting multitouch products visit
www.promultis.info
or call +44 (0) 239 251 2794



Remote for the Totem Engage



[promultis]

For more exciting multitouch products visit

www.promultis.info

or call +44 (0) 239 251 2794



Home Screen

After the screen boots up, you will enter the Android home screen, pictured below.



 
[promultis]

For more exciting multitouch products visit
www.promultis.info
or call +44 (0) 239 251 2794



All apps

After tapping "More app" you will be taken to this screen, pictured below.

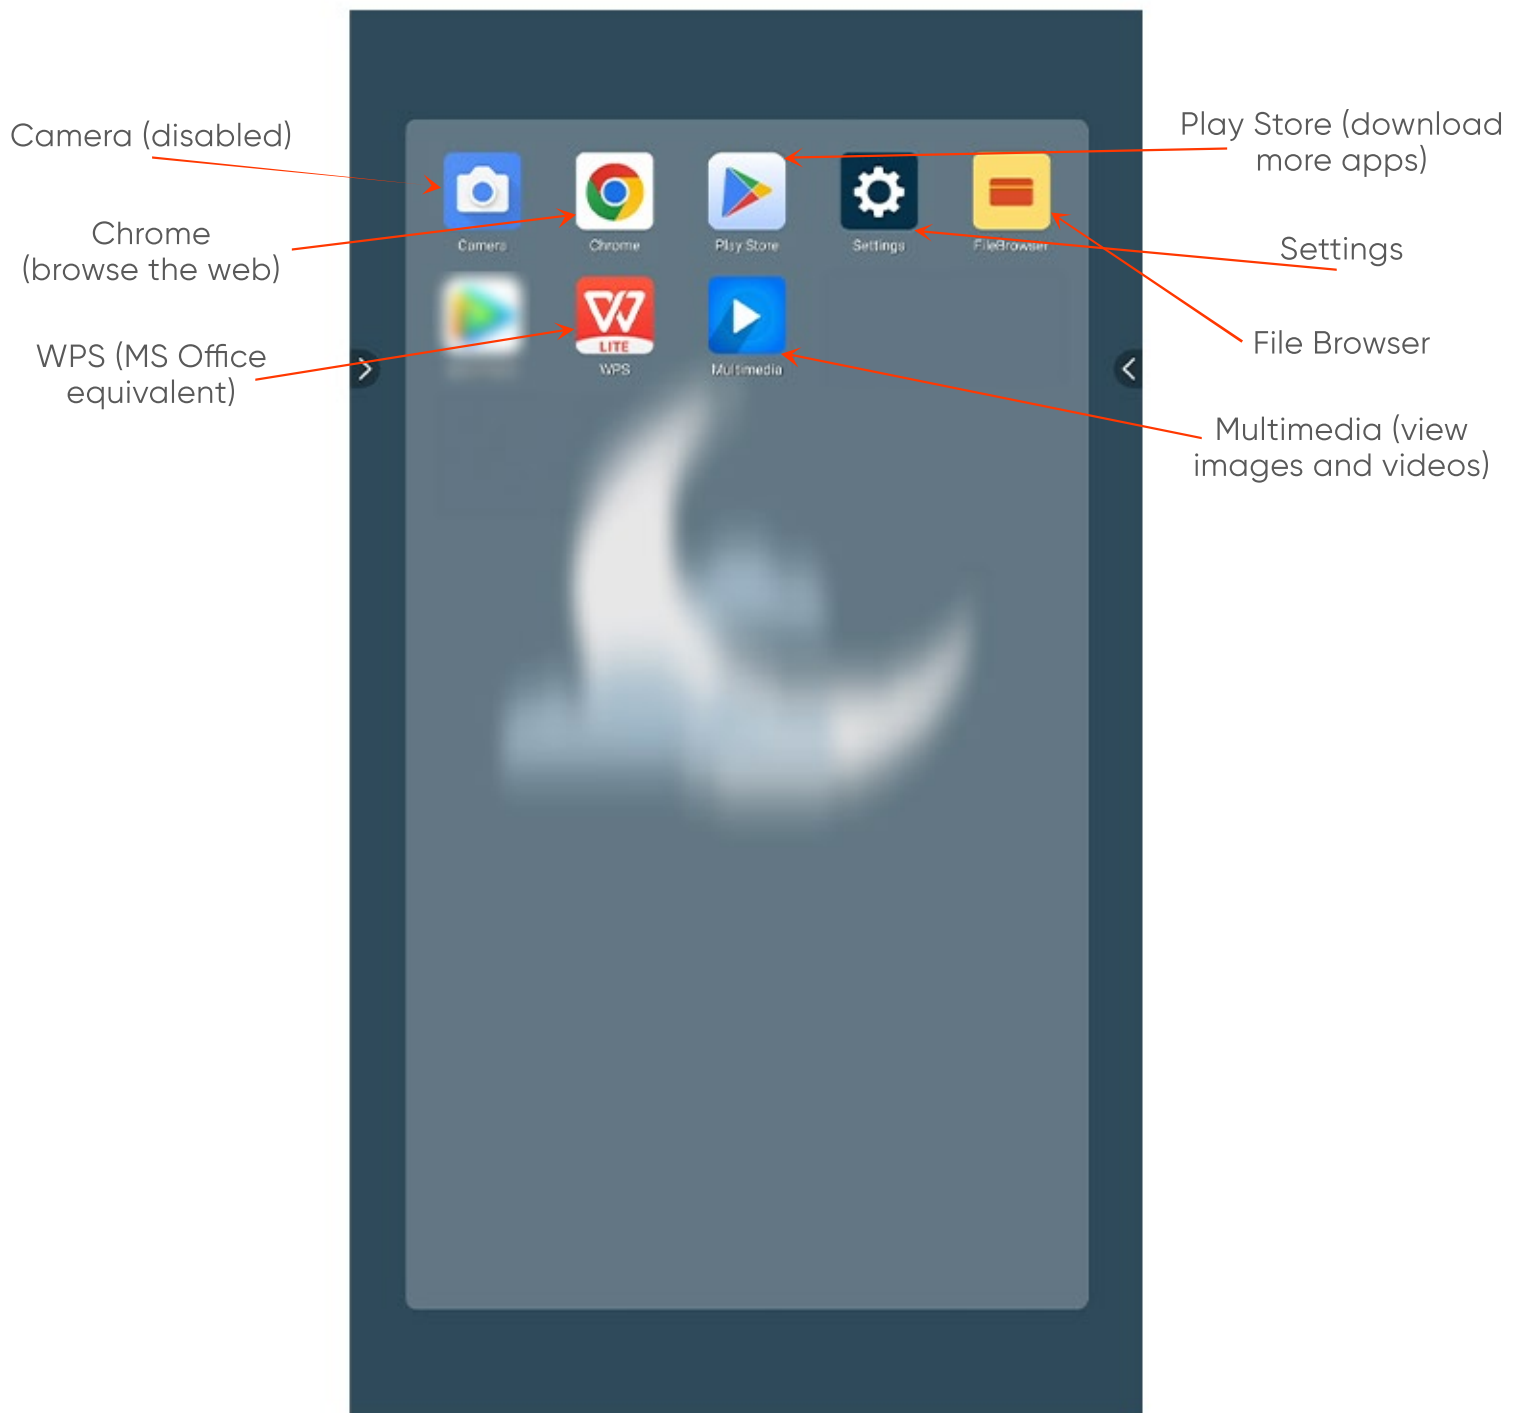

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – Network

Tapping “Settings” will take you to this menu. Tap the first row in the column on the left to select the network settings. Along the bottom of the screen, there are different options to choose from in the network section.


Select ‘Wired’ to configure a wired connection to the Totem. NOTE: The wired internet cable must be plugged in to the port on the right on the back of the totem.

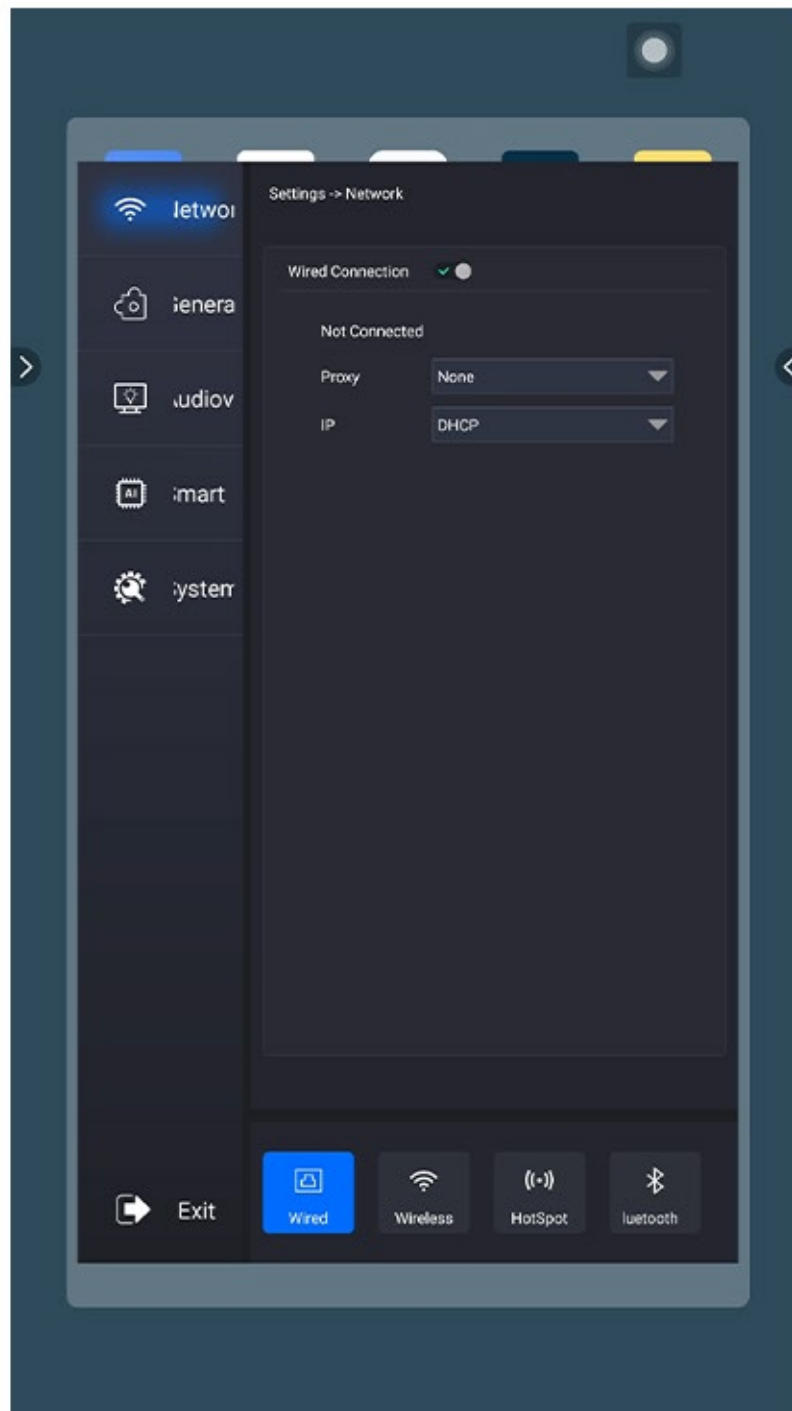

Settings – Network

Tapping “Settings” will take you to this menu. Tap the first row in the column on the left to select the network settings. Along the bottom of the screen, there are different options to choose from in the network section.

 
Select ‘Wireless’ to configure a wireless connection to the Totem. NOTE: The antennas must be plugged in to the back of the totem.

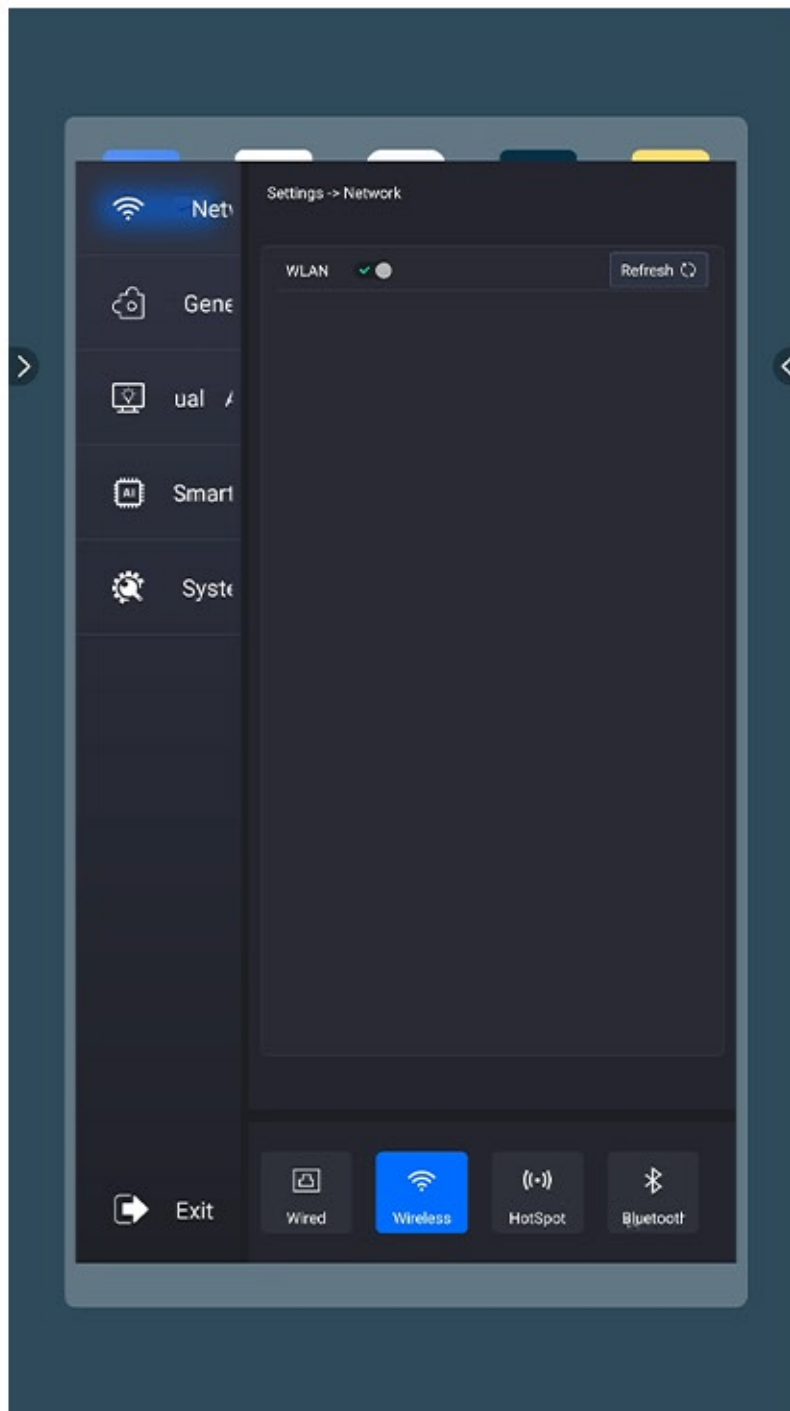

Settings – Network

Tapping “Settings” will take you to this menu. Tap the first row in the column on the left to select the network settings. Along the bottom of the screen, there are different options to choose from in the network section.

 Select ‘Hotspot’ to configure a hotspot connection.

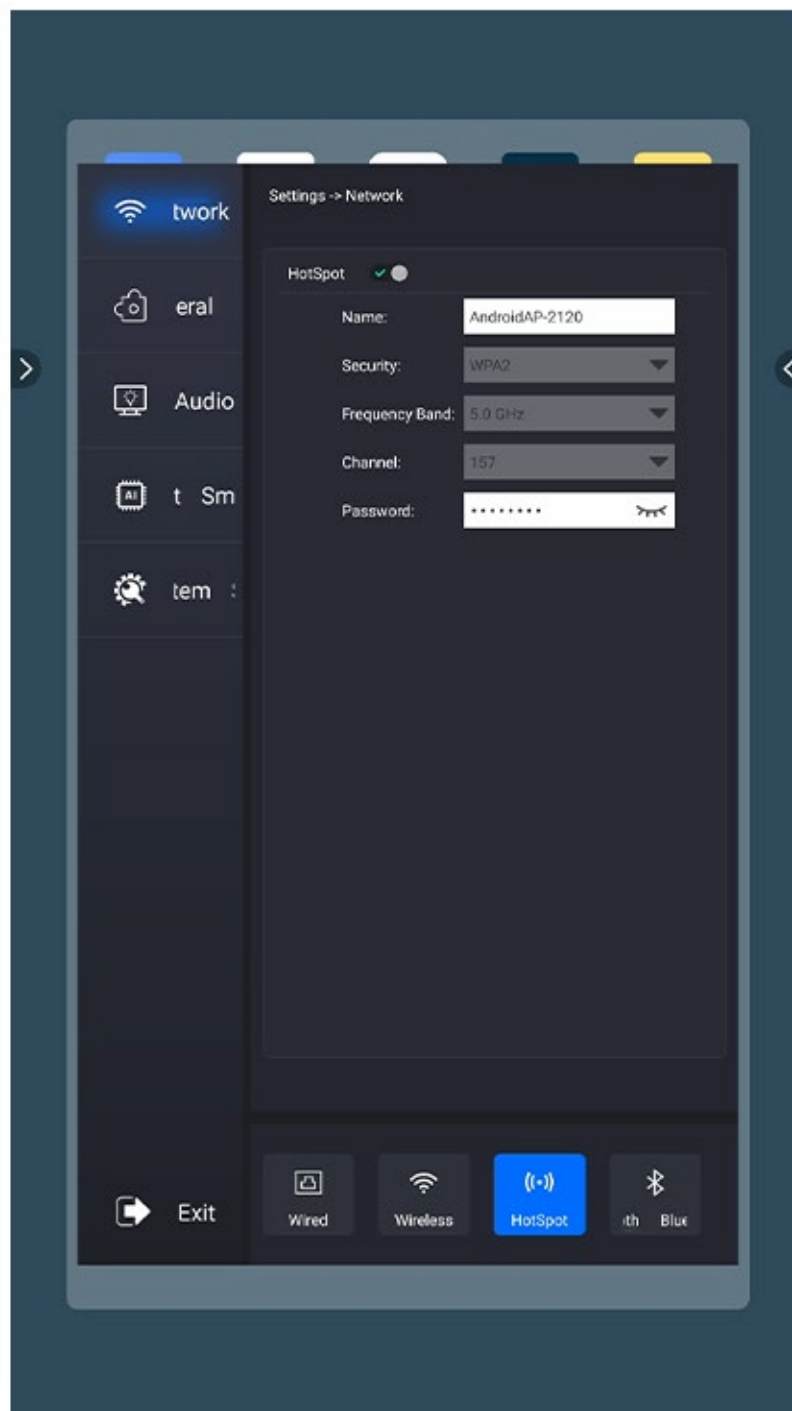

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – Network

Tapping “Settings” will take you to this menu. Tap the first row in the column on the left to select the network settings. Along the bottom of the screen, there are different options to choose from in the network section.

Select ‘Bluetooth’ to configure bluetooth settings.

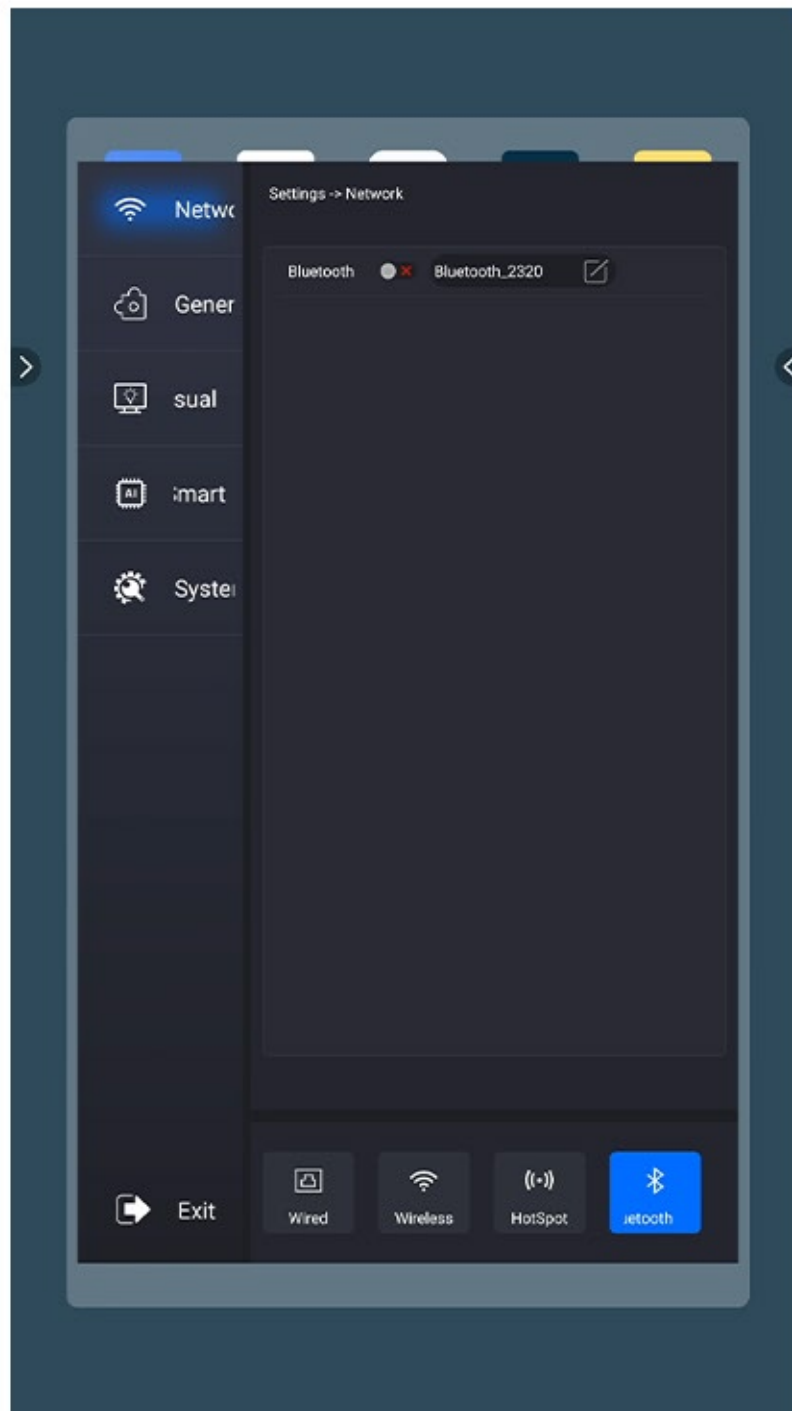

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – General

Tapping “Settings” will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

Select ‘Theme’ to change the theme.

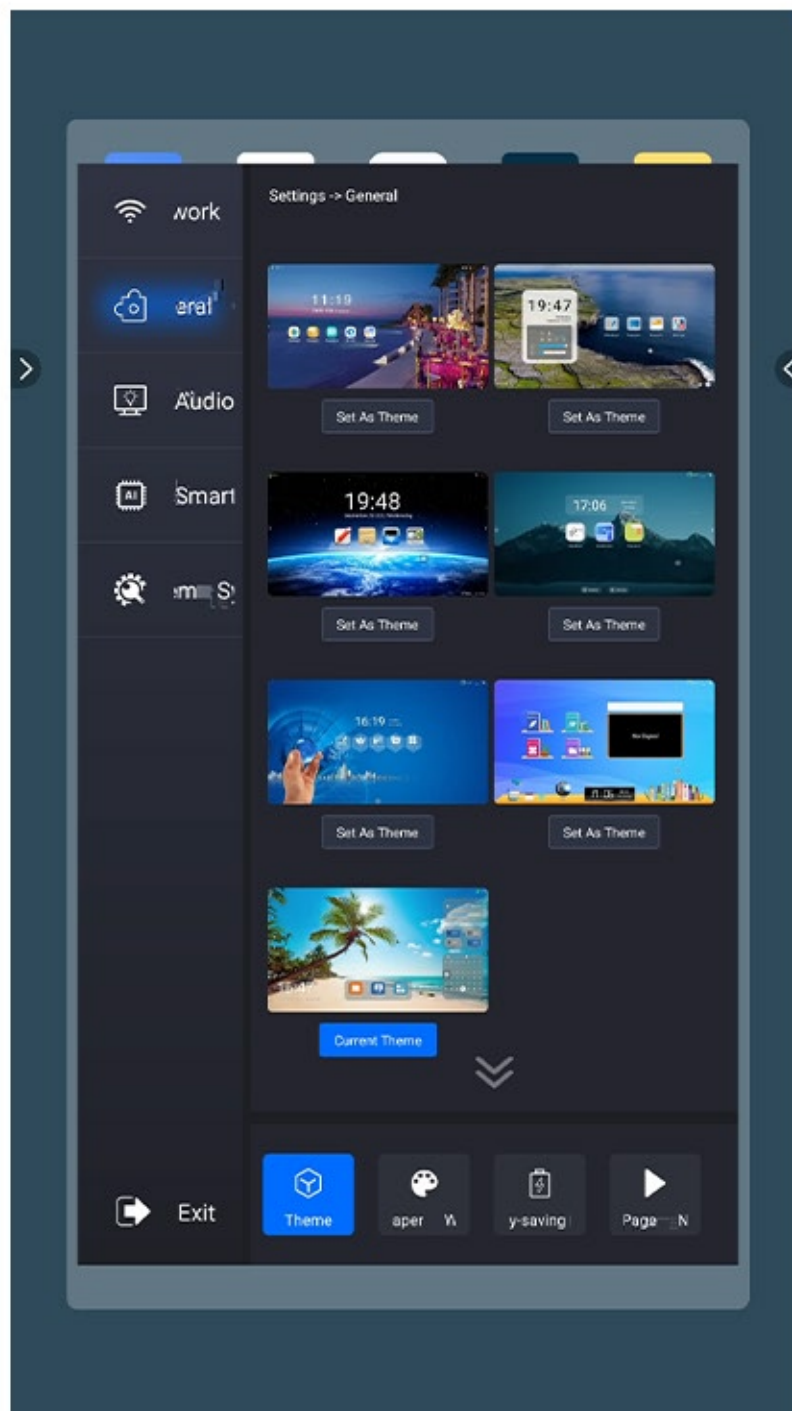

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – General

Tapping “Settings” will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

Select ‘Wallpaper’ to change the wallpaper.

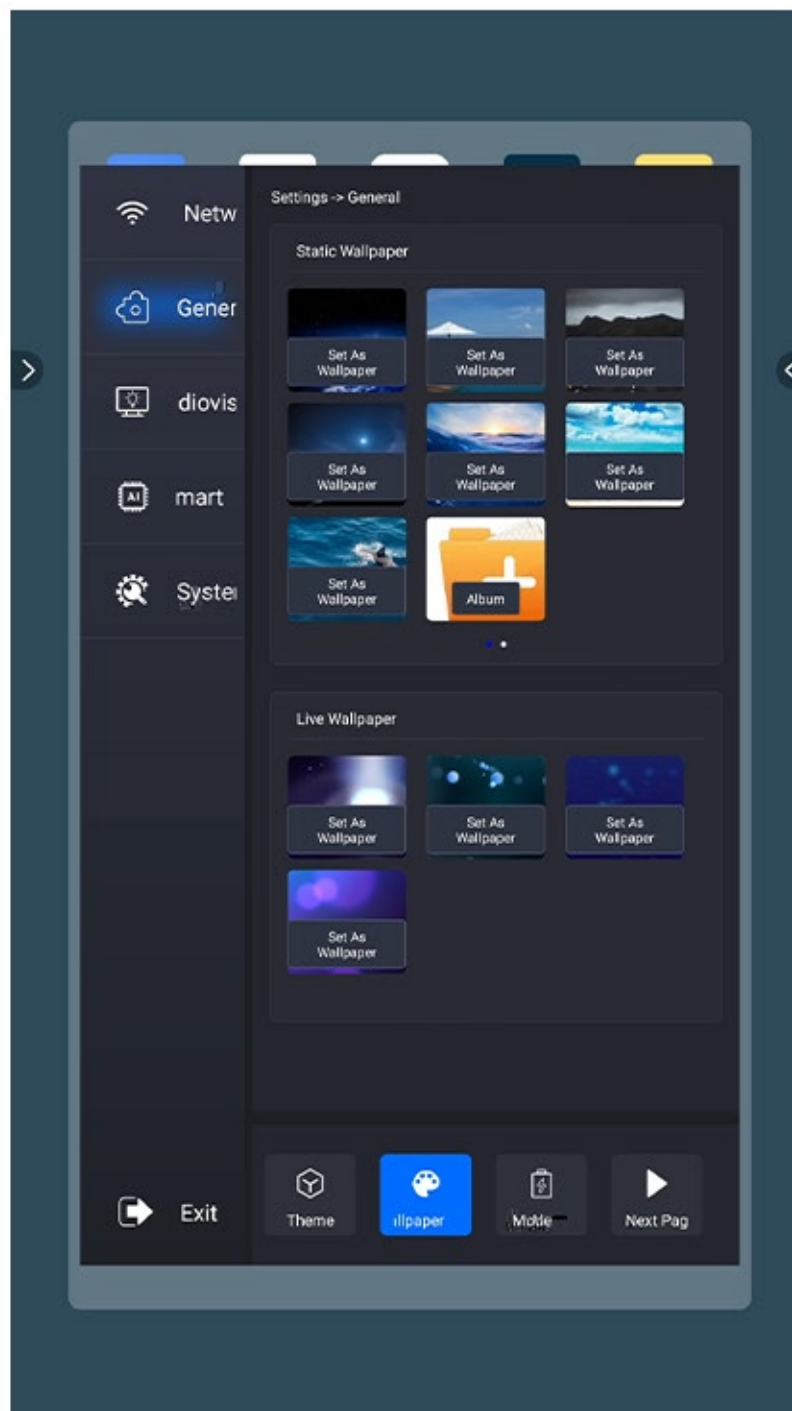

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

Select 'Energy-saving' to edit the sleep timer and operation.

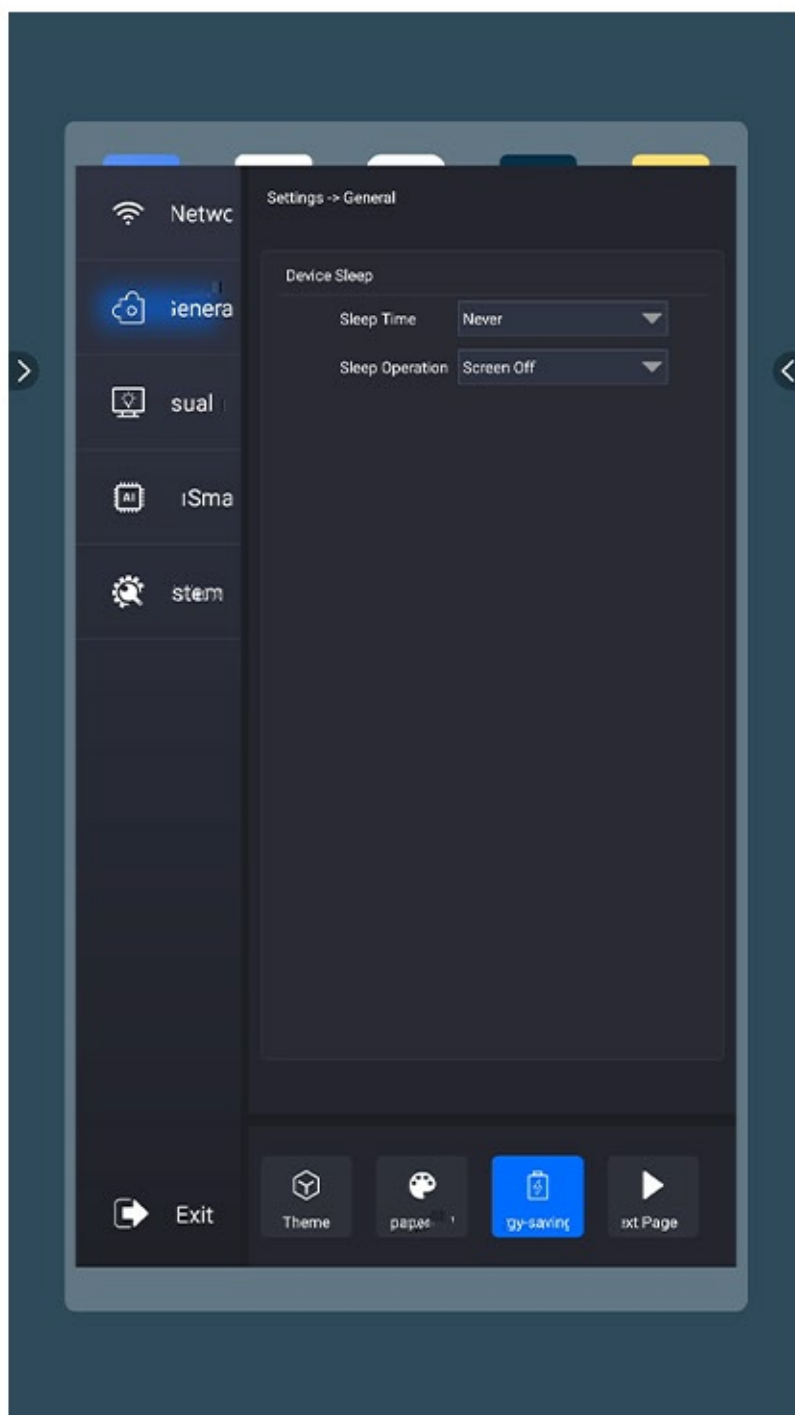

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

Select 'Regulation' to adjust the brightness and sound.

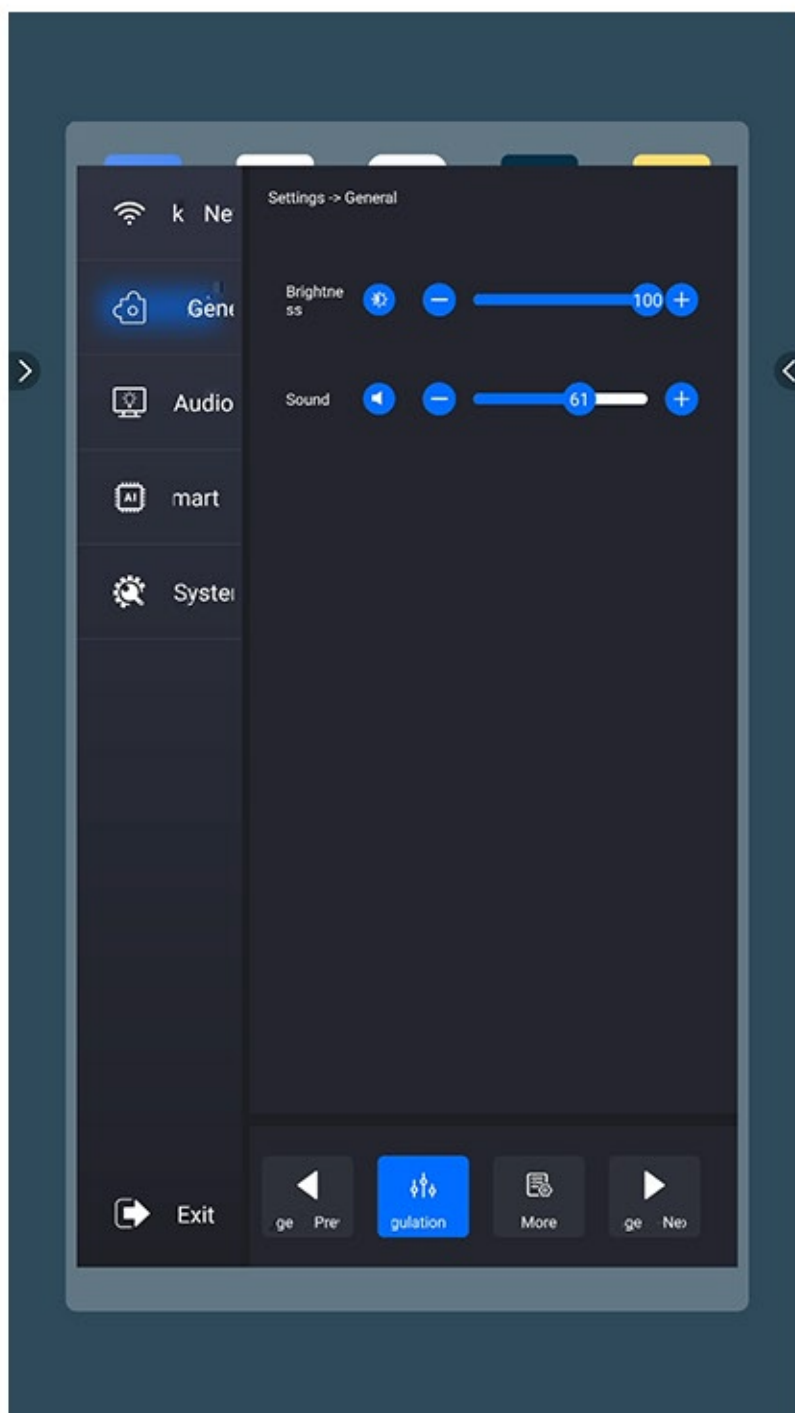

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – General

Tapping “Settings” will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.


Select ‘More’ to toggle the visibility of the sidebar/menus as well as certain functionalities and widgets.

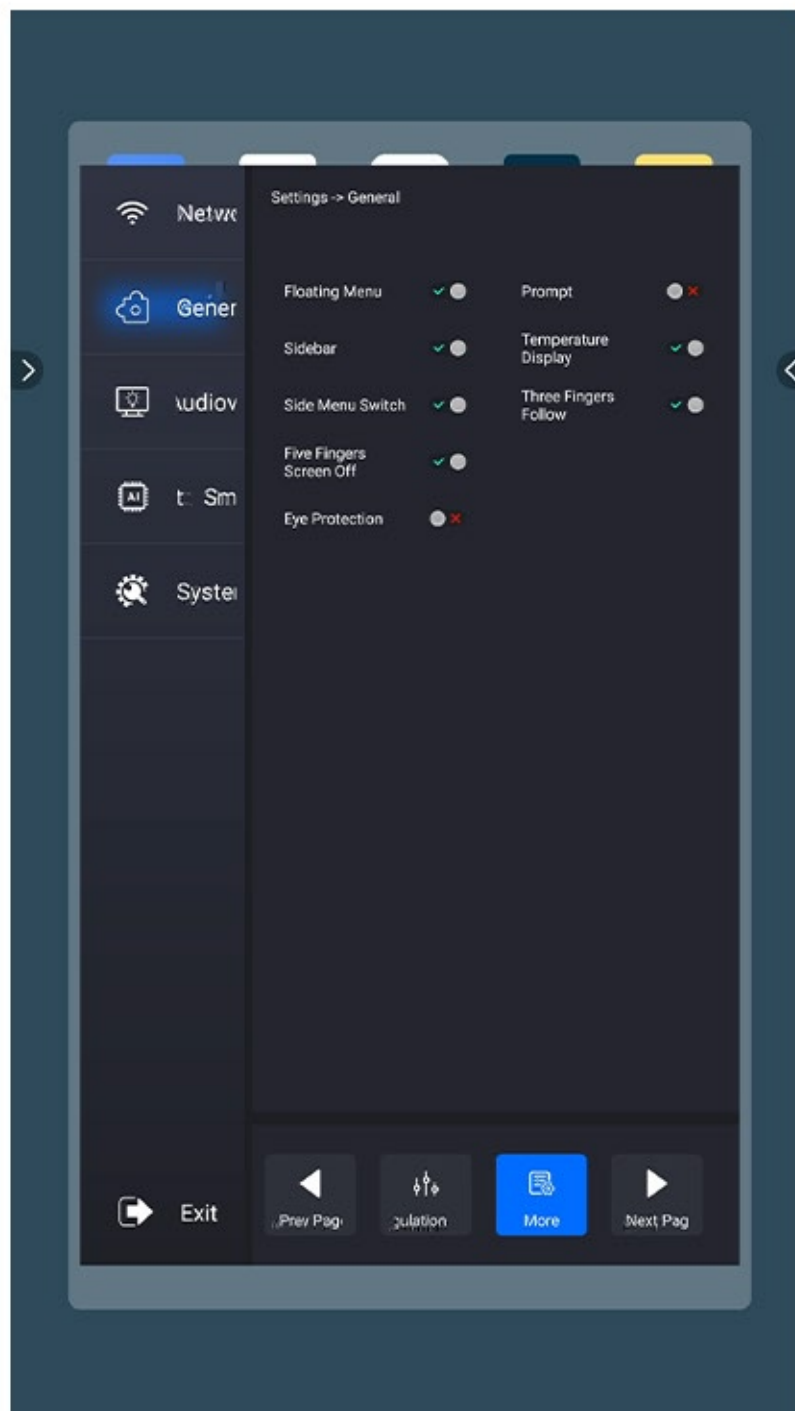

Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

 Select 'Boot App' to select an app for the Totem to boot into.

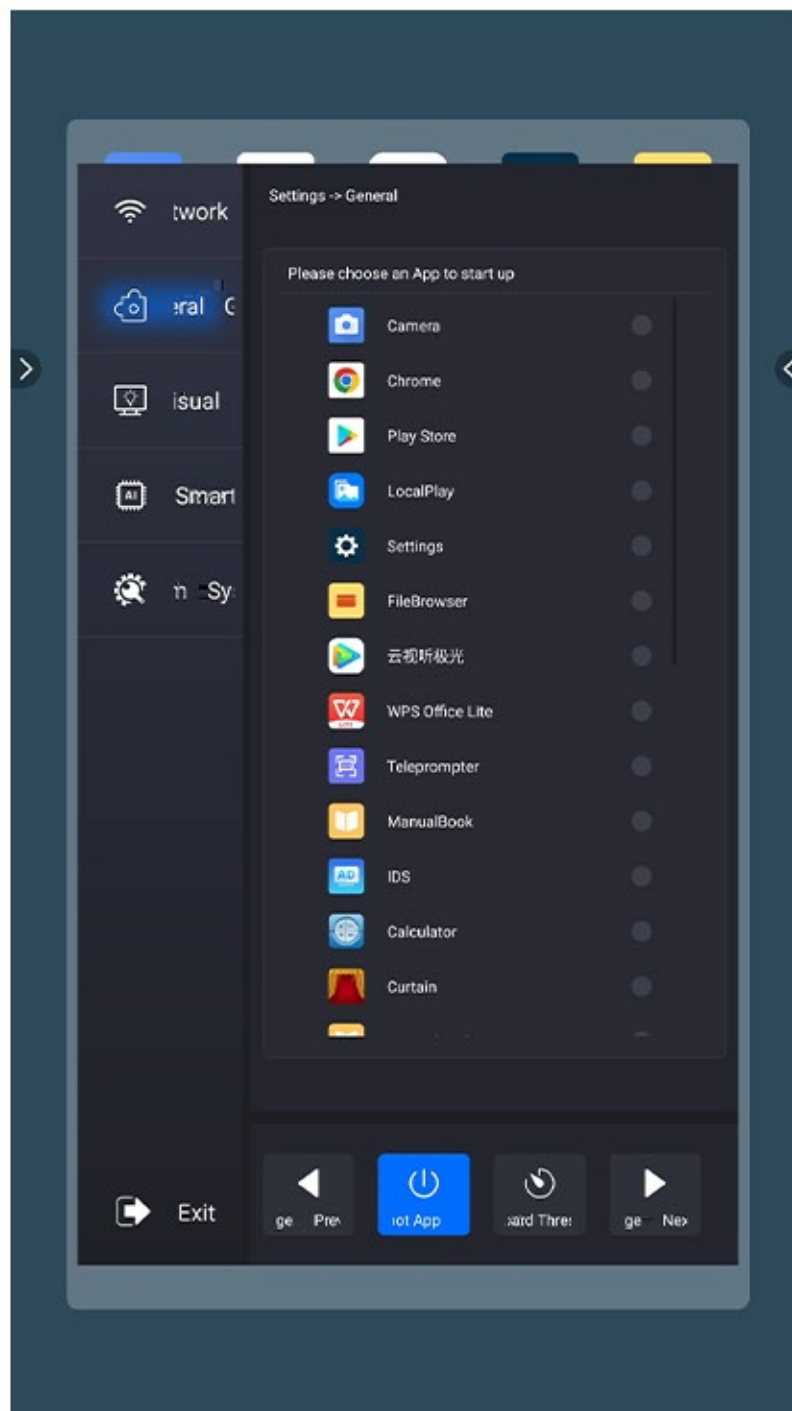

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

Select 'Whiteboard' to set the threshold for the totem.

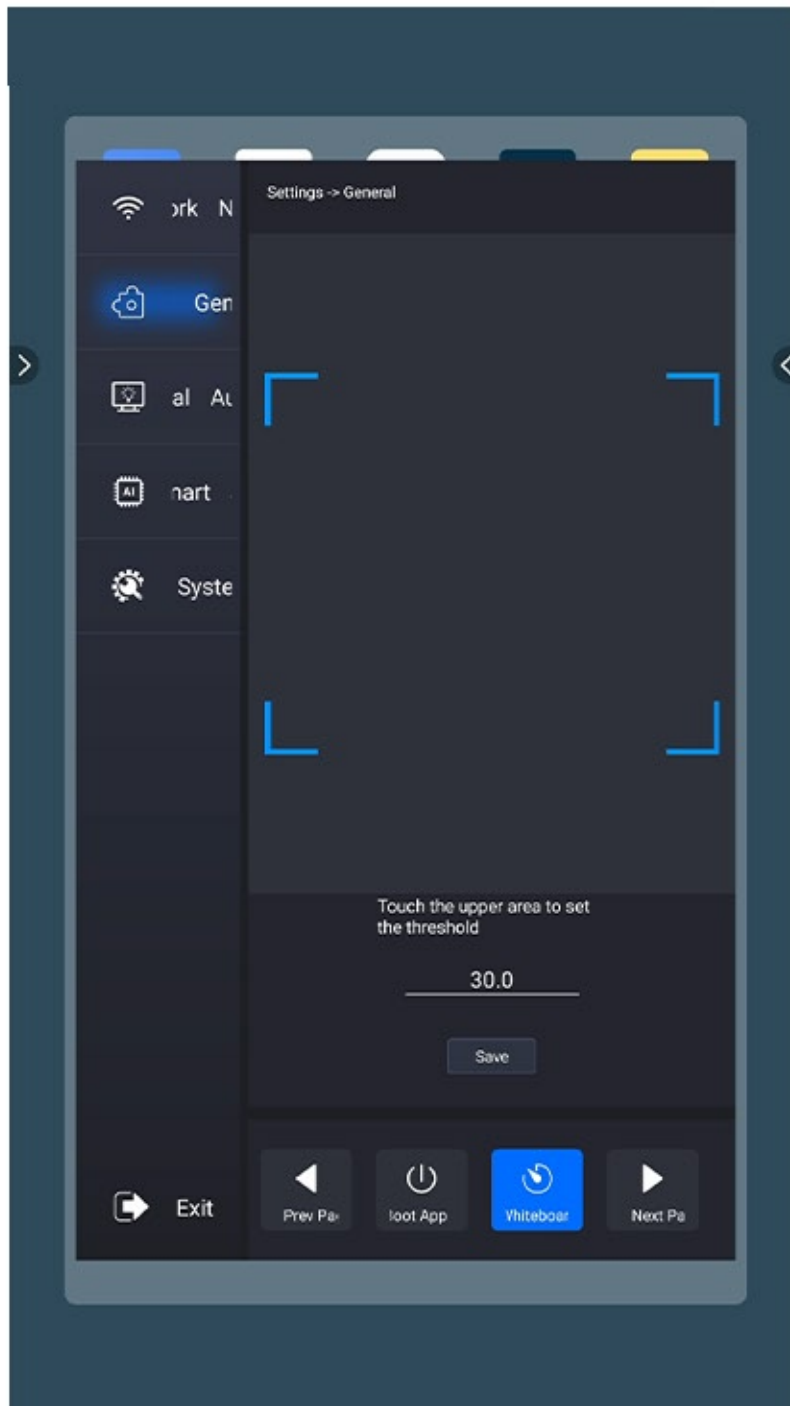

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – General

Tapping “Settings” will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

Select ‘Application’ to clear cache, clear data and uninstall your installed apps.

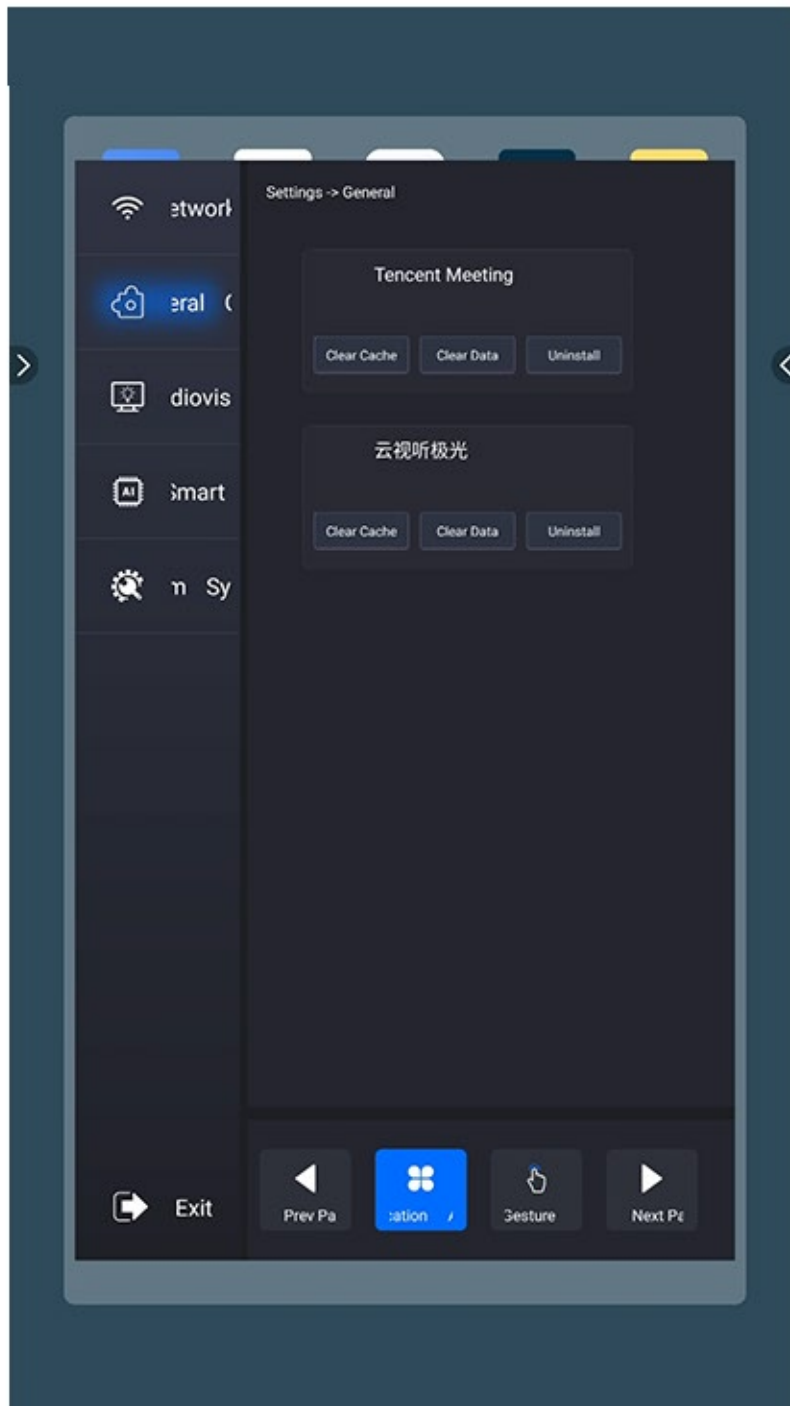

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

Select 'Five Finger Gesture' to set an action for a five finger gesture.

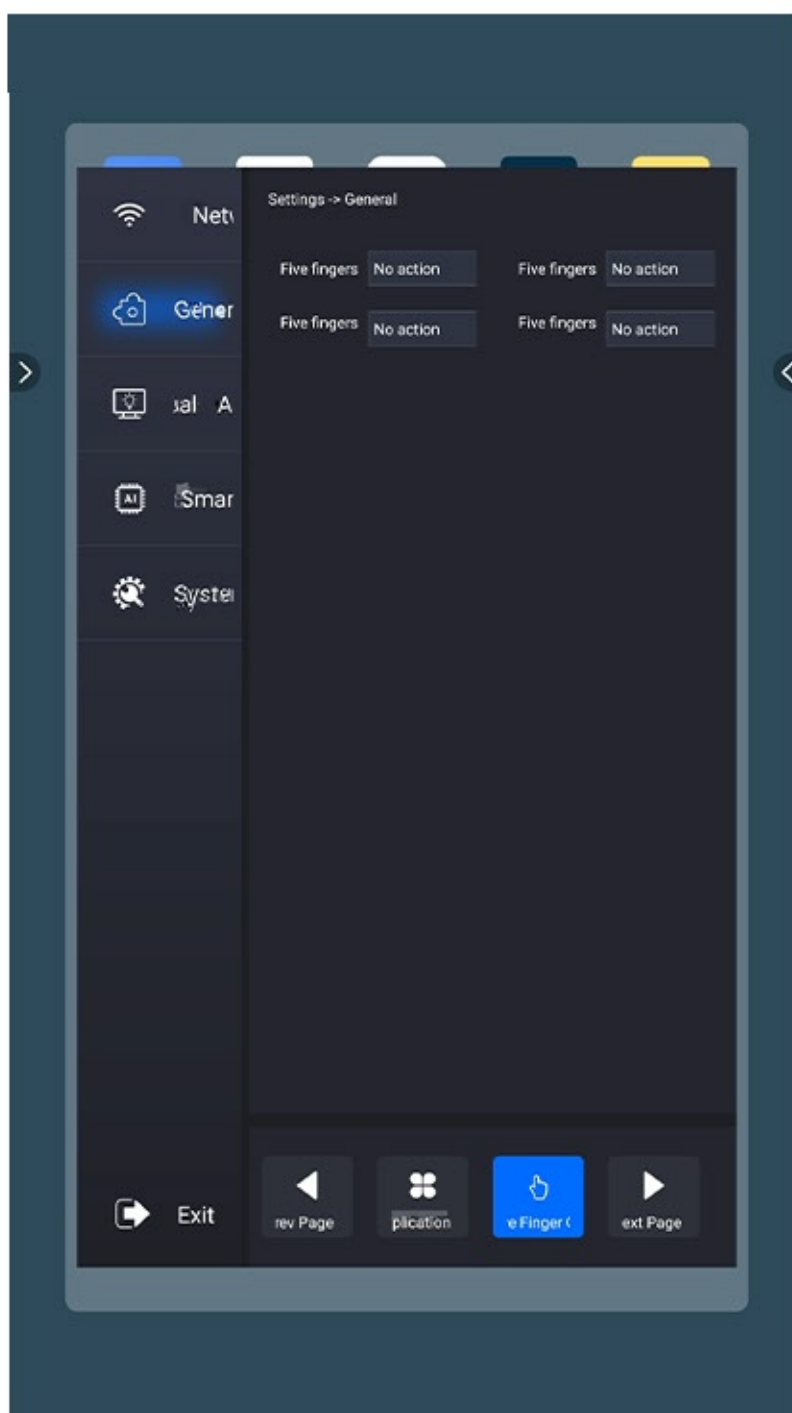

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – General

Tapping “Settings” will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

Select ‘Blu-ray setting’ to adjust the Blu-ray settings.

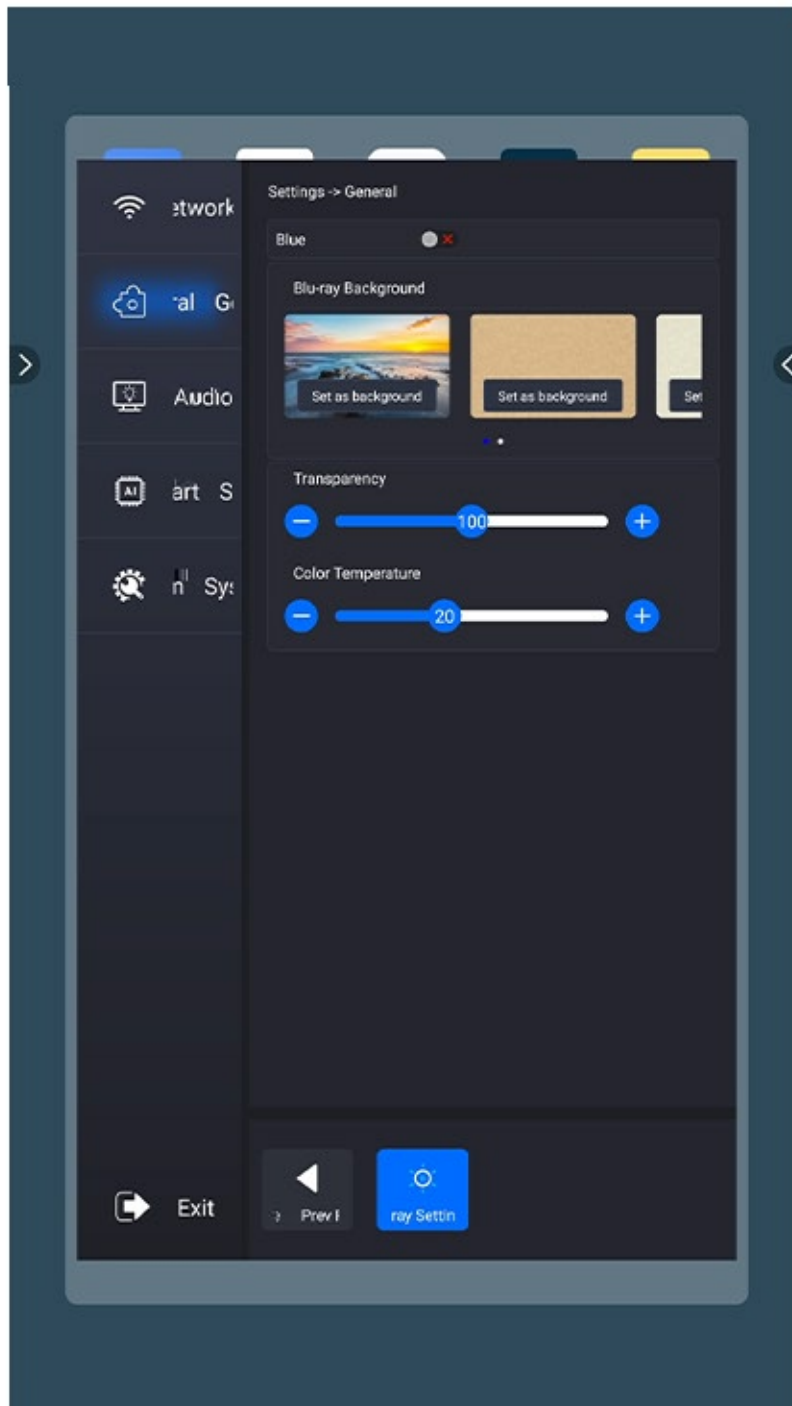

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – Audiovisual

Tapping “Settings” will take you to this menu. Tap the third row in the column on the left to select the general settings.

Select ‘Audiovisual’ to adjust the sound settings.

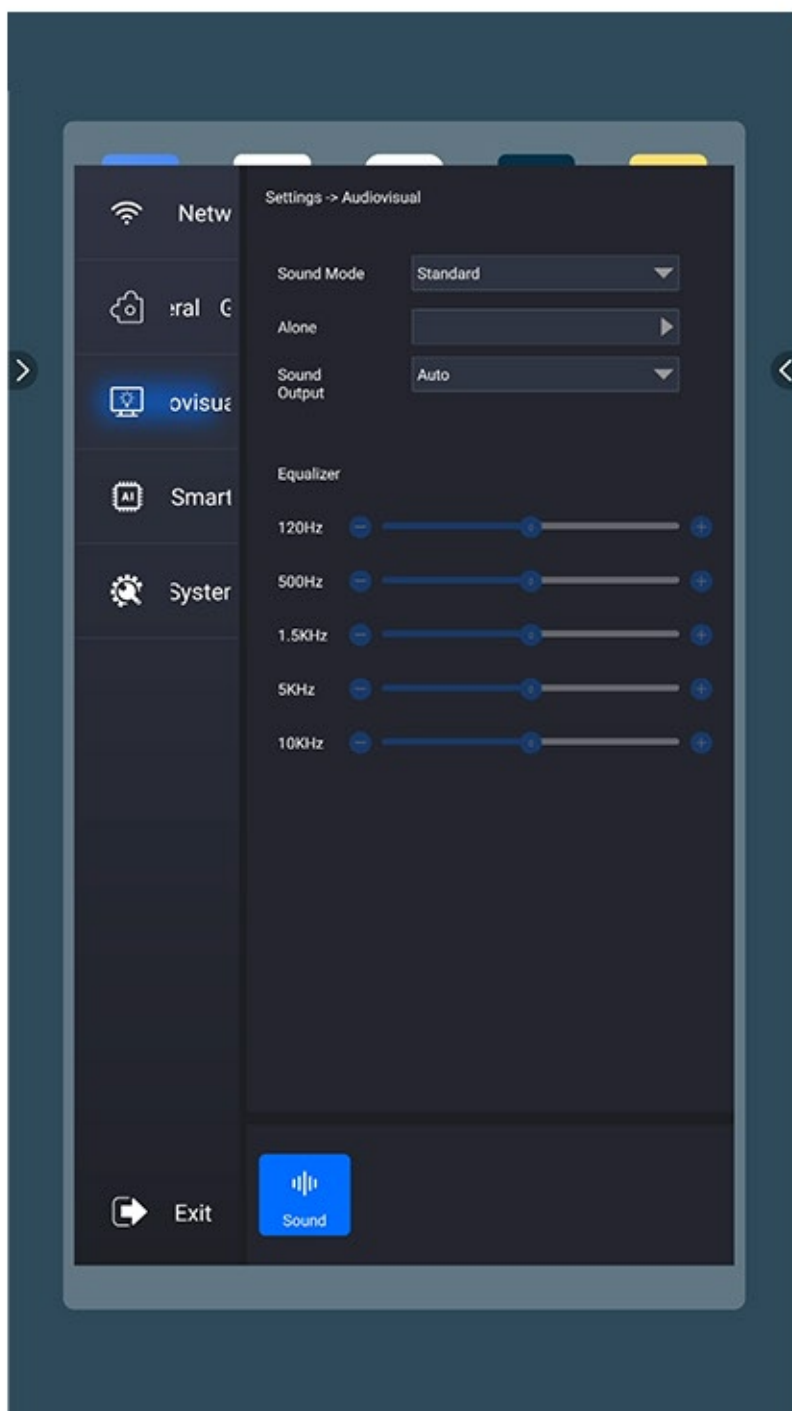

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – Smart

Tapping “Settings” will take you to this menu. Tap the fourth row in the column on the left to select the Smart settings. Along the bottom of the screen, there are different options to choose from in the Smart section.

Select ‘Security’ to adjust the security settings.

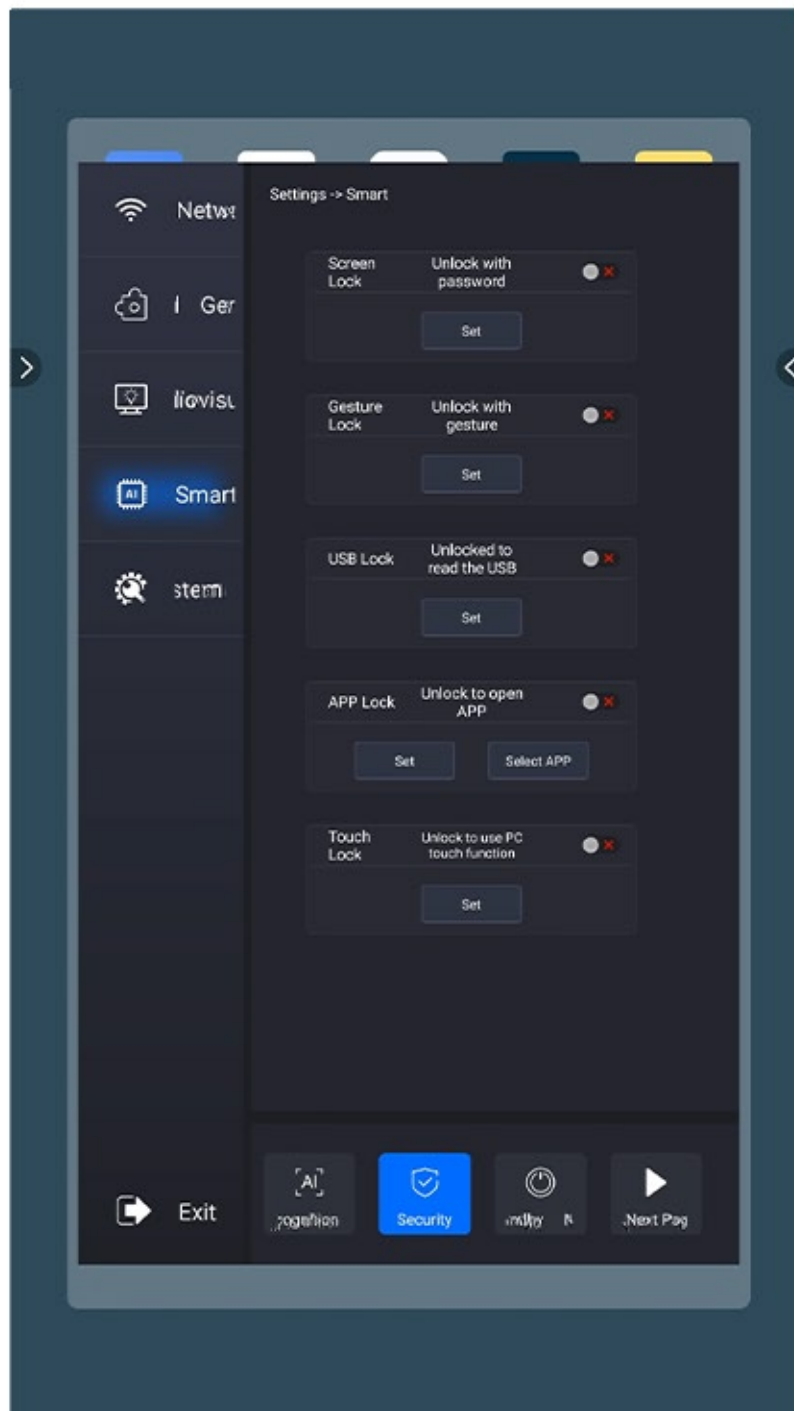

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – Smart

Tapping “Settings” will take you to this menu. Tap the fourth row in the column on the left to select the Smart settings. Along the bottom of the screen, there are different options to choose from in the Smart section.

Select ‘Signal’ to adjust the “No Signal” screens’ settings.

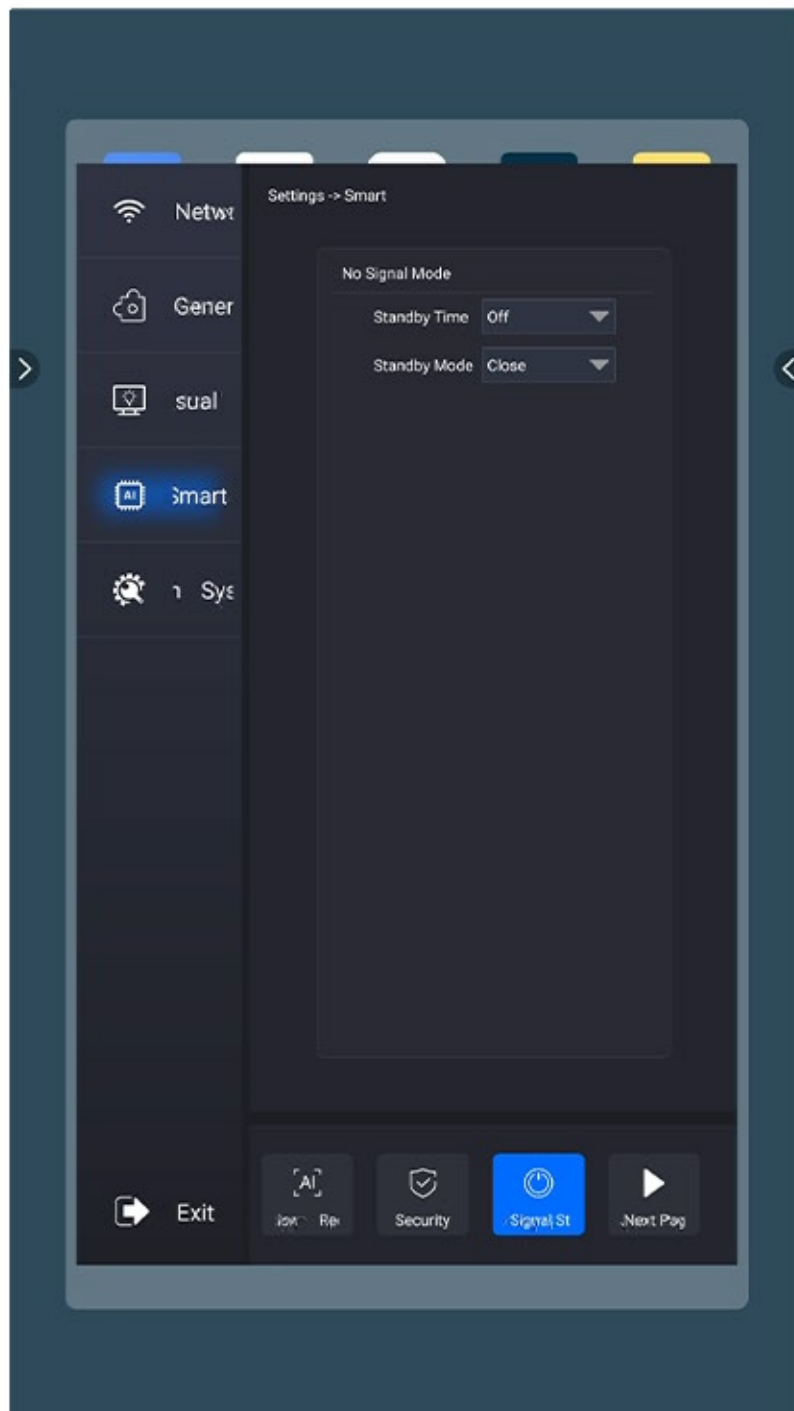

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – Smart

Tapping “Settings” will take you to this menu. Tap the fourth row in the column on the left to select the Smart settings. Along the bottom of the screen, there are different options to choose from in the Smart section.

Select ‘Startup’ to adjust the time which the totem comes on automatically.

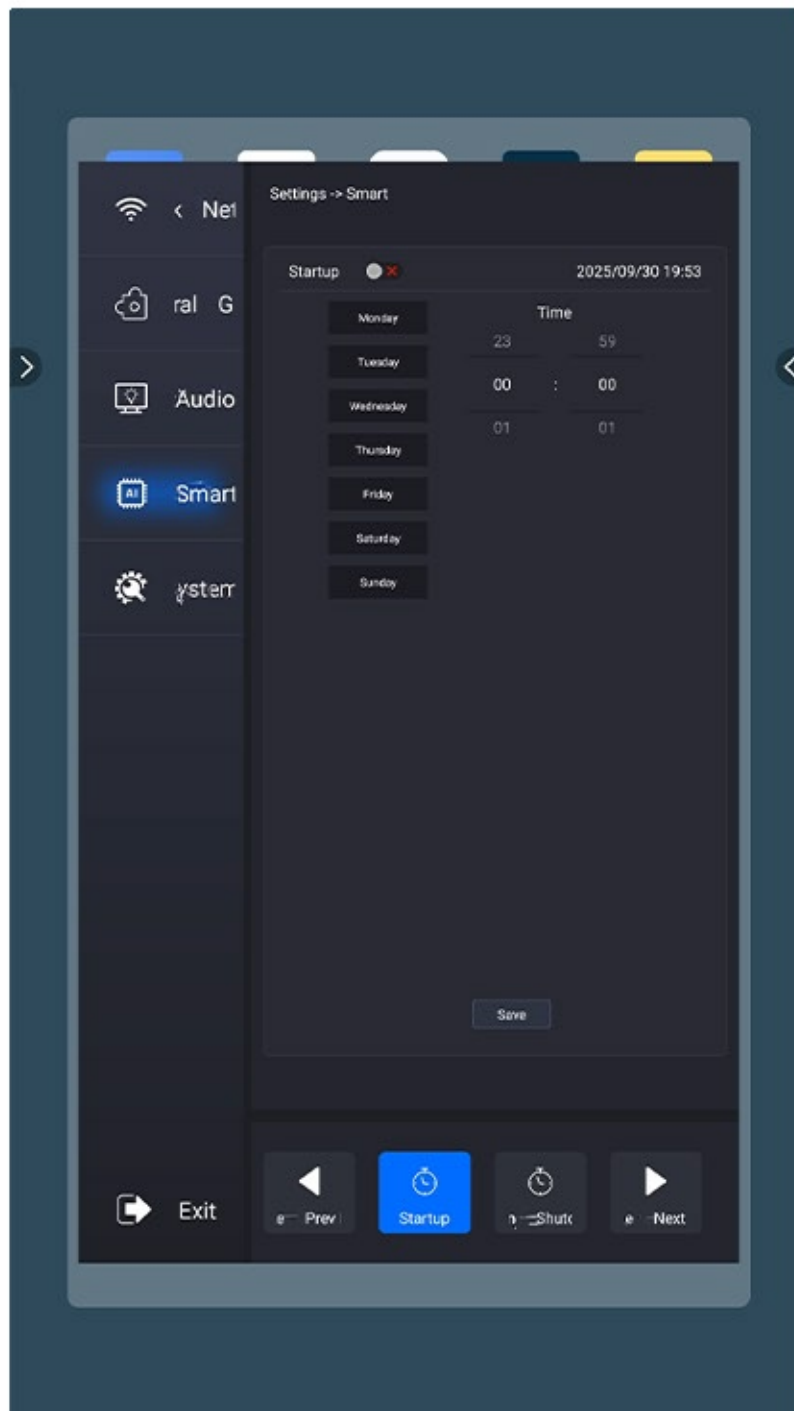

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – Smart

Tapping “Settings” will take you to this menu. Tap the fourth row in the column on the left to select the Smart settings. Along the bottom of the screen, there are different options to choose from in the Smart section.

Select ‘Shutdown’ to adjust the time which the totem goes off automatically.

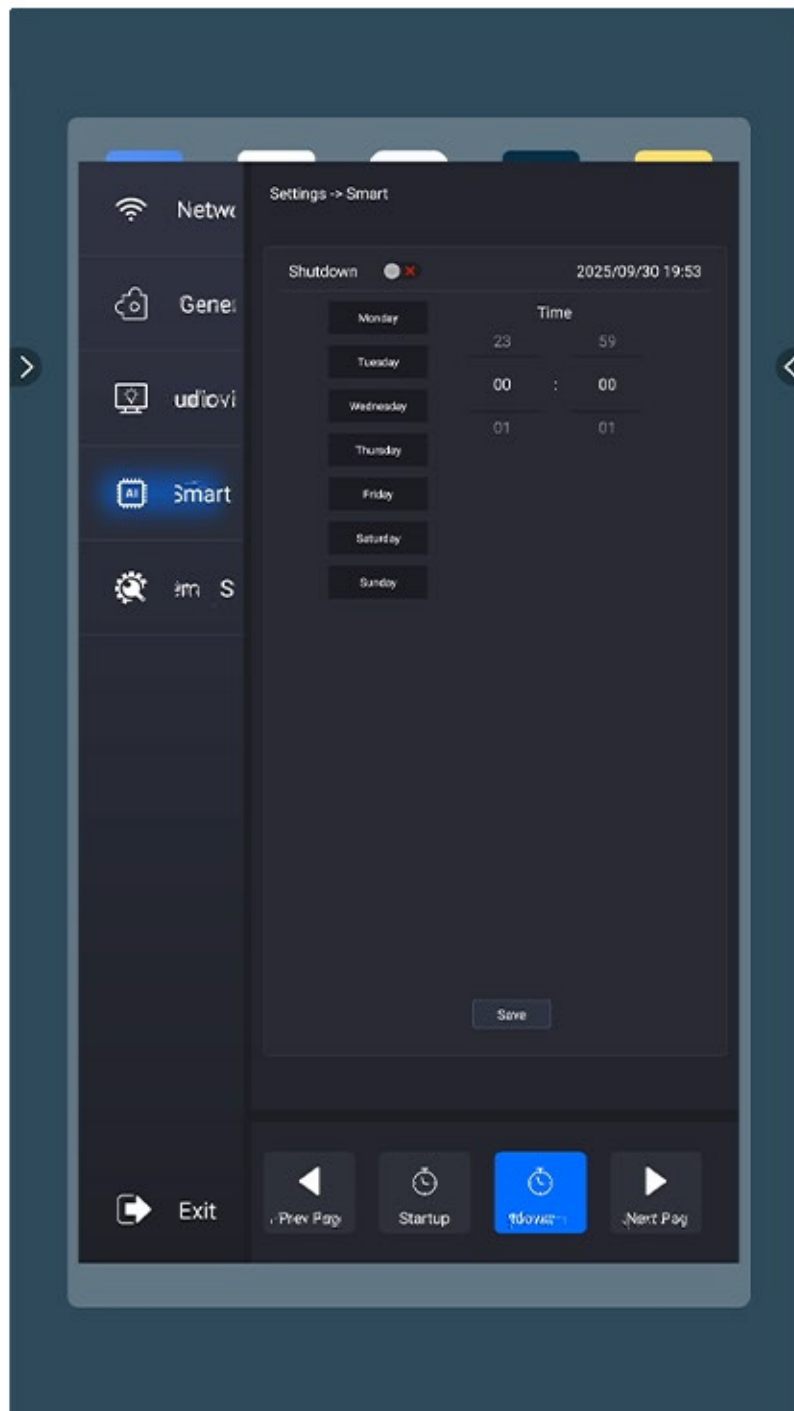

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – Smart

Tapping “Settings” will take you to this menu. Tap the fourth row in the column on the left to select the Smart settings. Along the bottom of the screen, there are different options to choose from in the Smart section.


Select ‘Boot-up play’ to toggle video autoplay on boot. You will need to place the video into the AutoPlay folder within the File Explorer app.

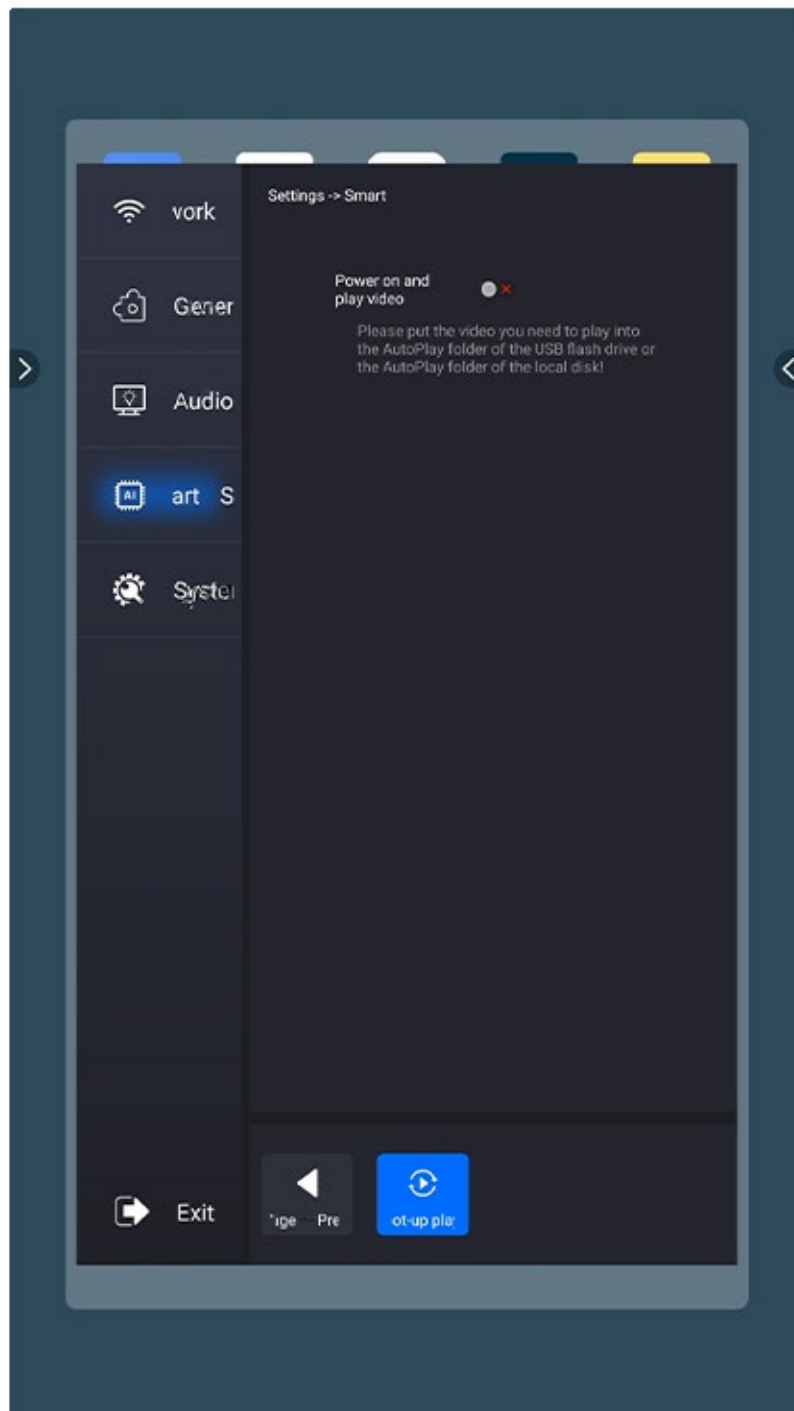

Settings – Smart

Tapping “Settings” will take you to this menu. Tap the fifth row in the column on the left to select the System. Along the bottom of the screen, there are different options to choose from in the System section.

 Select ‘About’ to view device information.

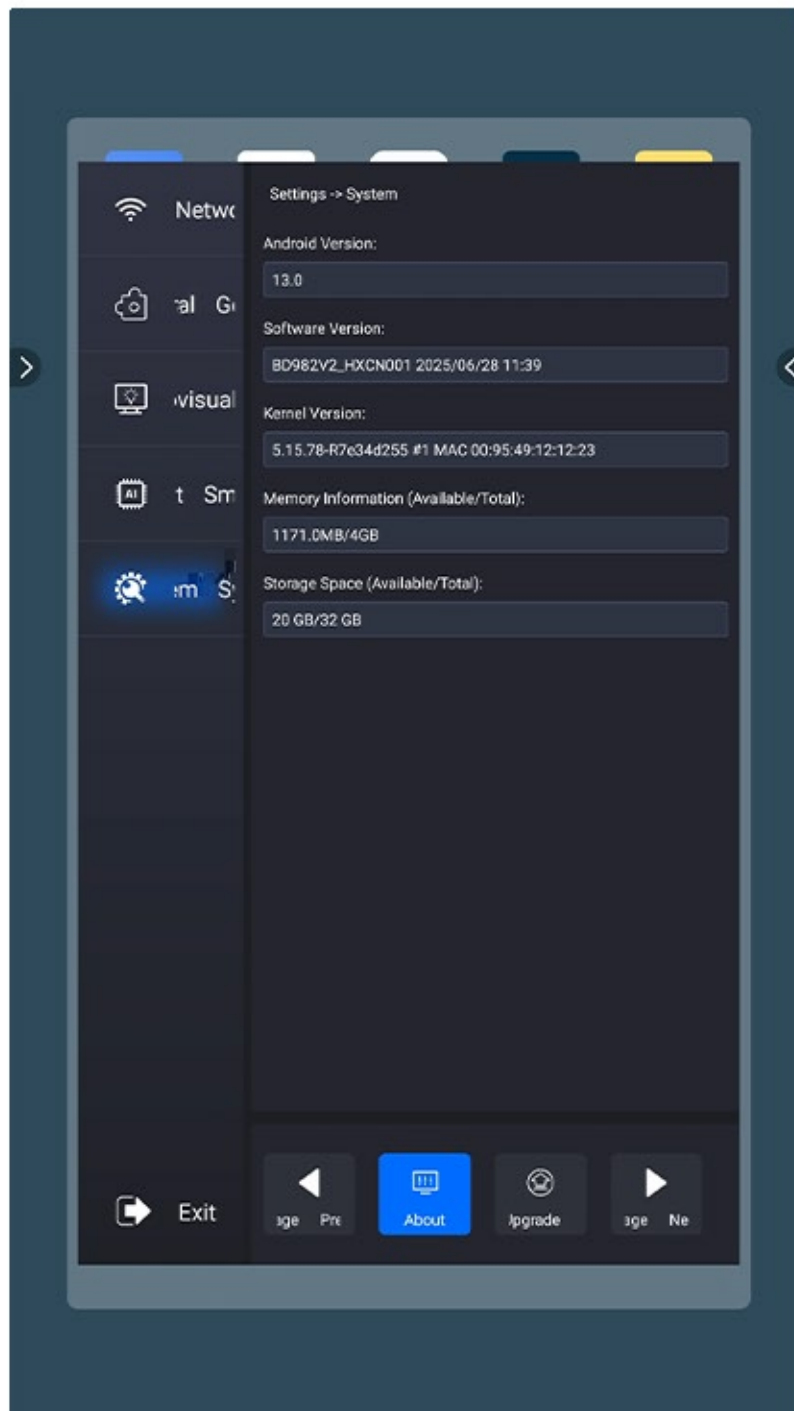

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – System

Tapping “Settings” will take you to this menu. Tap the fifth row in the column on the left to select the System. Along the bottom of the screen, there are different options to choose from in the System section.

Select ‘Input’ to switch between an on screen keyboard and the remote controller..

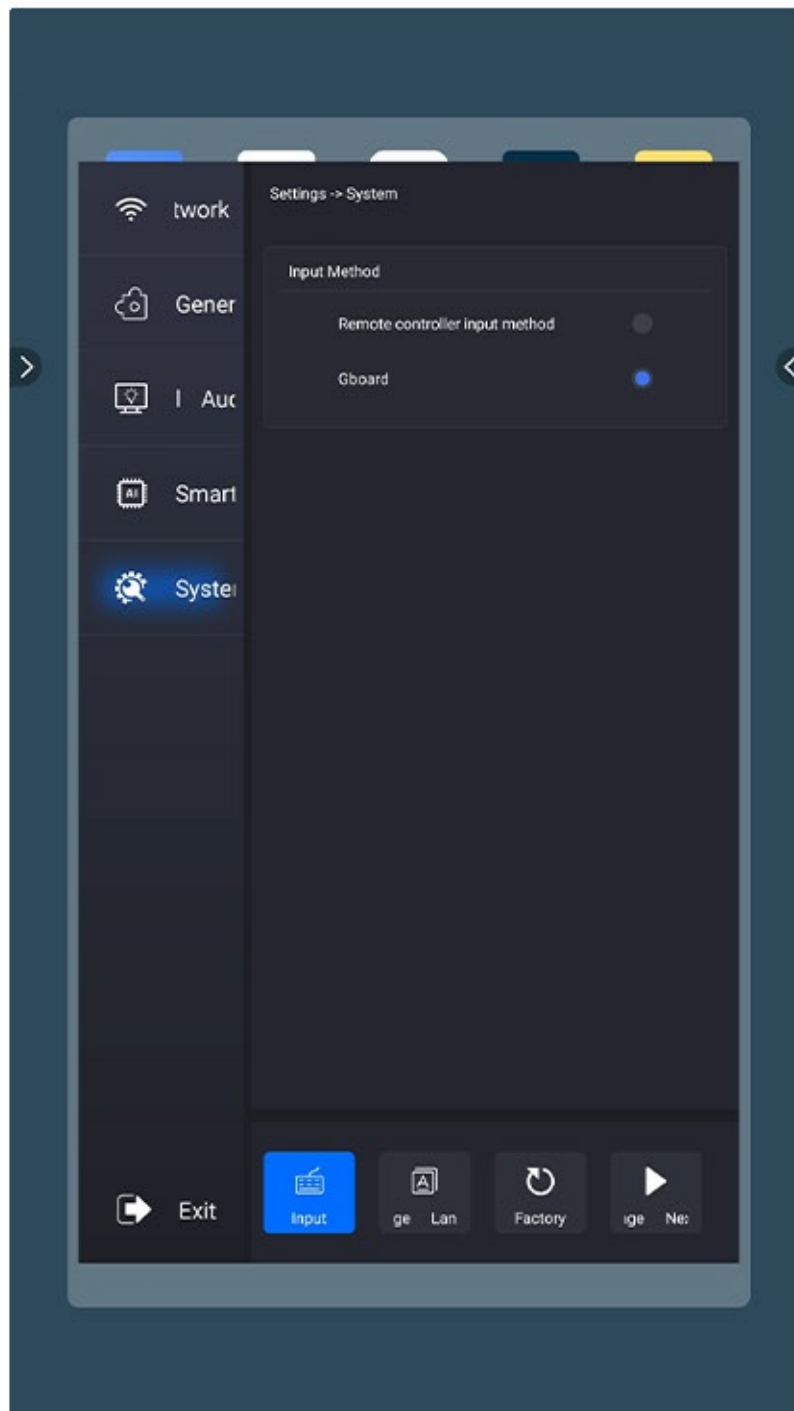

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – System

Tapping “Settings” will take you to this menu. Tap the fifth row in the column on the left to select the System. Along the bottom of the screen, there are different options to choose from in the System section.

Select ‘System Functions’ to change the power-up mode, and change the OPS PC auto-boot settings.

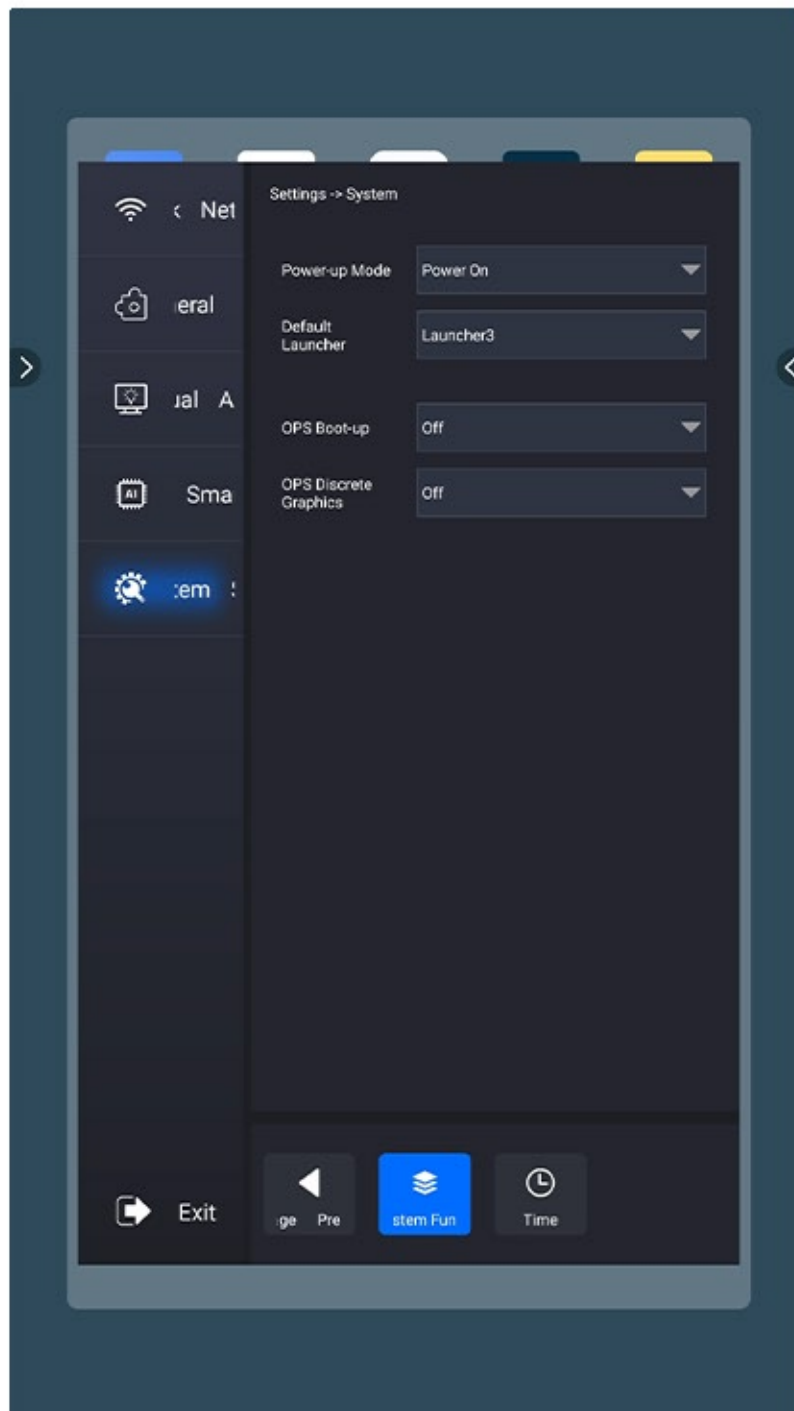

[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Settings – System

Tapping “Settings” will take you to this menu. Tap the fifth row in the column on the left to select the System. Along the bottom of the screen, there are different options to choose from in the System section.

Select ‘Time’ to change the date, time and time zone.

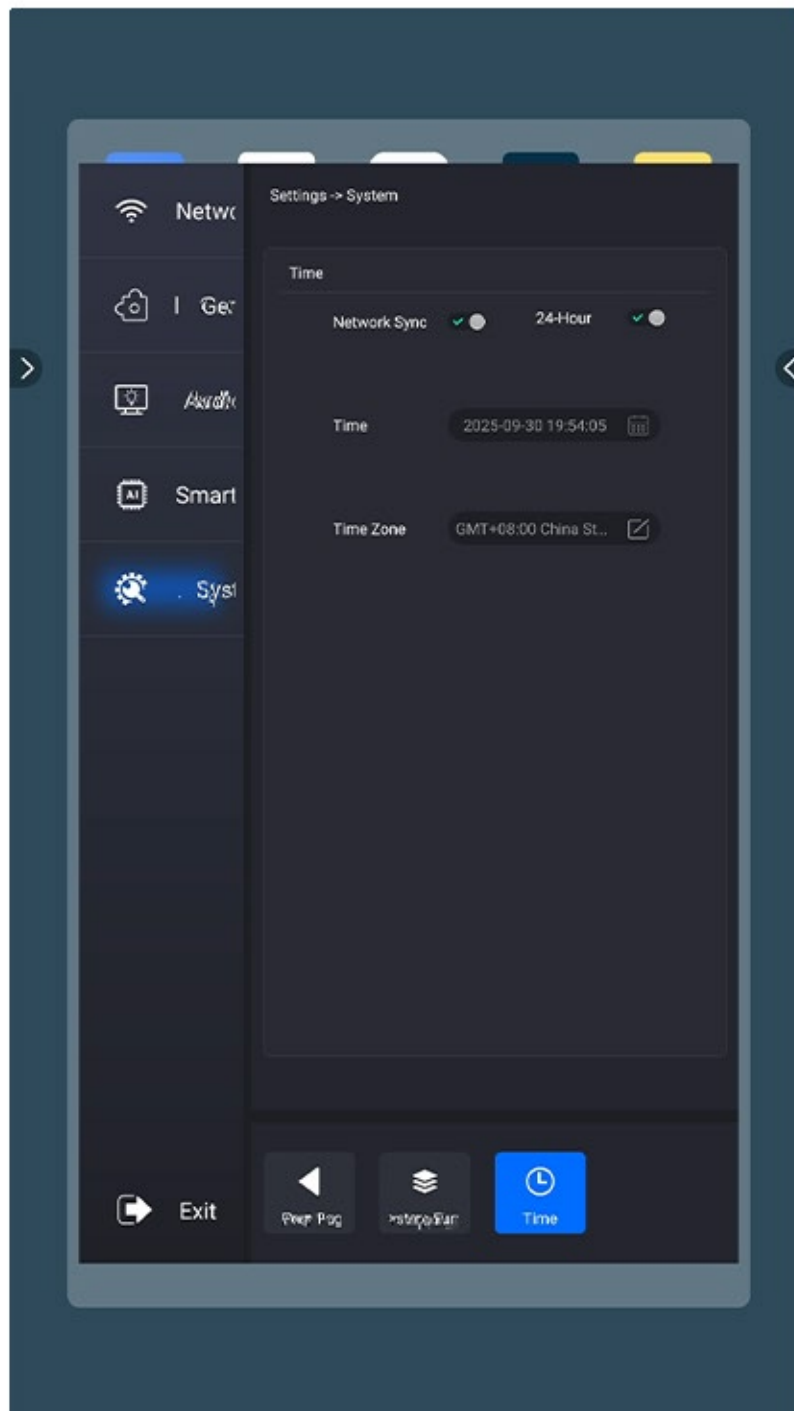

[promultis]

For more exciting multitouch products visit

www.promultis.info

or call +44 (0) 239 251 2794



 
File Explorer – Overview

Tapping “File Explorer” will take you to this menu. In the column on the left, you will see different file types, as well as ‘all’. Tap on a row to navigate to its contents.

NOTE: Putting a video in the “AutoPlay” folder and then toggling on AutoPlay will cause the totem to only play that video.

NOTE: If inserting a USB stick, ensure it is in one of the two USB ports on the back of the totem to the right. This will then appear underneath “Local Disk”.

Hold on a file to access the different options.

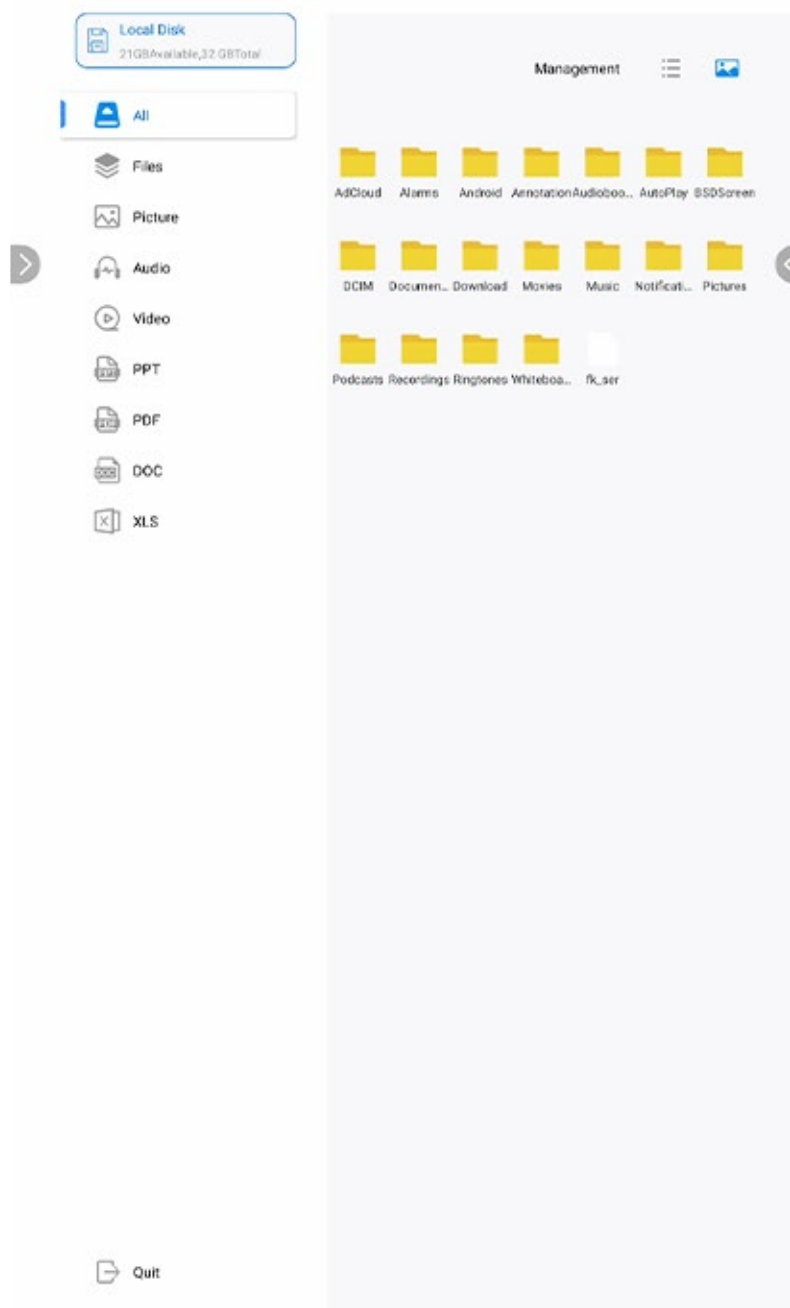

[promultis]

For more exciting multitouch products visit

 
www.promultis.info

or call +44 (0) 239 251 2794



Side Menu

Tapping one of the arrows on either side of the screen will bring up this menu. This can be hidden within the settings menu (Settings > General > More).

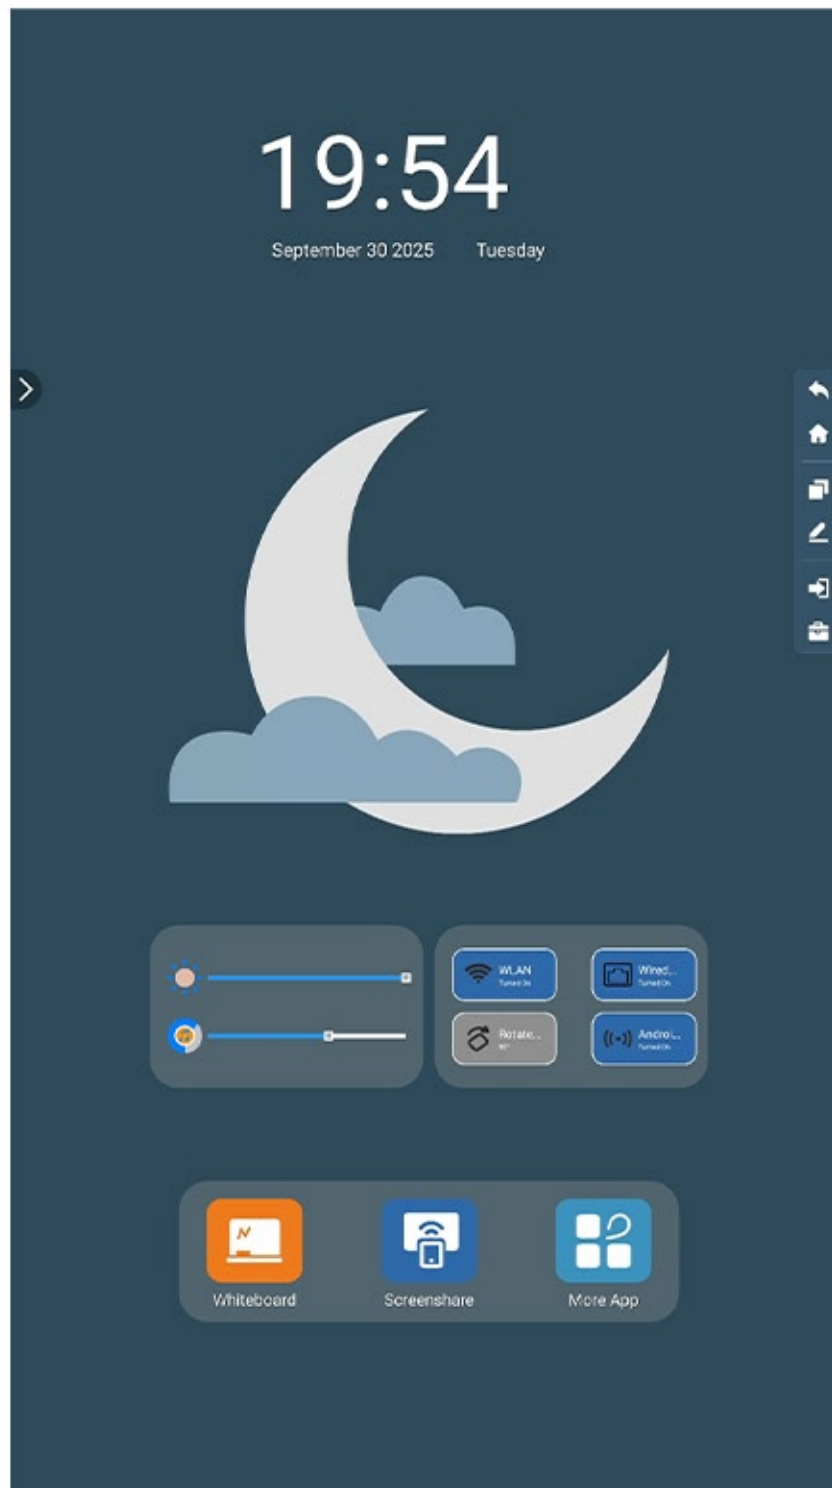

- Go back
- Return to home
- View all open apps
- Annotate
- Select a source
- Advanced menu



[promultis]

For more exciting multitouch products visit

www.promultis.info

 
or call +44 (0) 239 251 2794



Advanced Side Menu

Tapping on the briefcase icon on the simple side menu will bring up this advanced side menu. From here, you can choose two apps to split screen, add a child lock, turn the screen off, take a screenshot, start a screen recording, magnify a section of the screen, set a timer, access the camera (disabled for this totem), and add more apps to this section. You can also adjust the brightness and volume from here, turn the totem off, switch to PC, and access the settings menu.

NOTE: The default password for the childlock is 2580 or 0000.

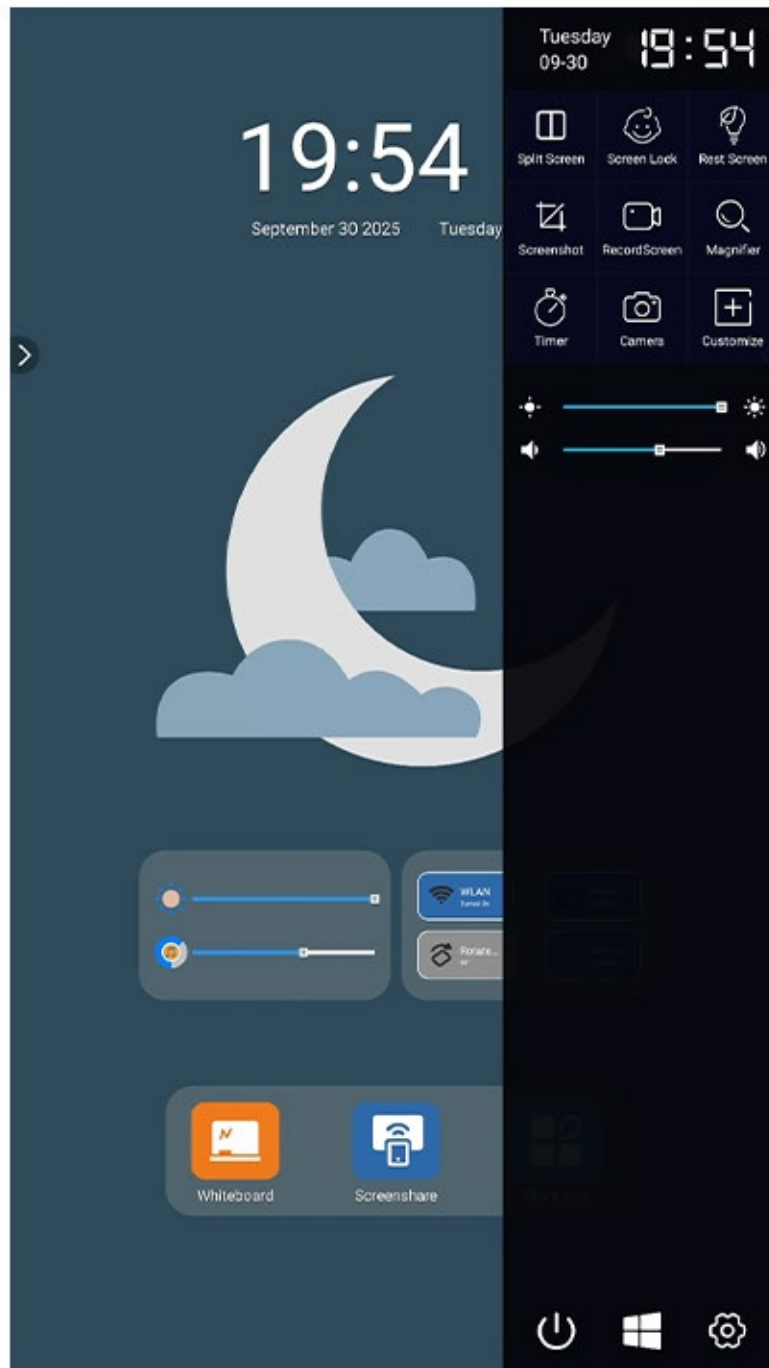

[promultis]

 
For more exciting multitouch products visit

www.promultis.info

or call +44 (0) 239 251 2794



Connectivity

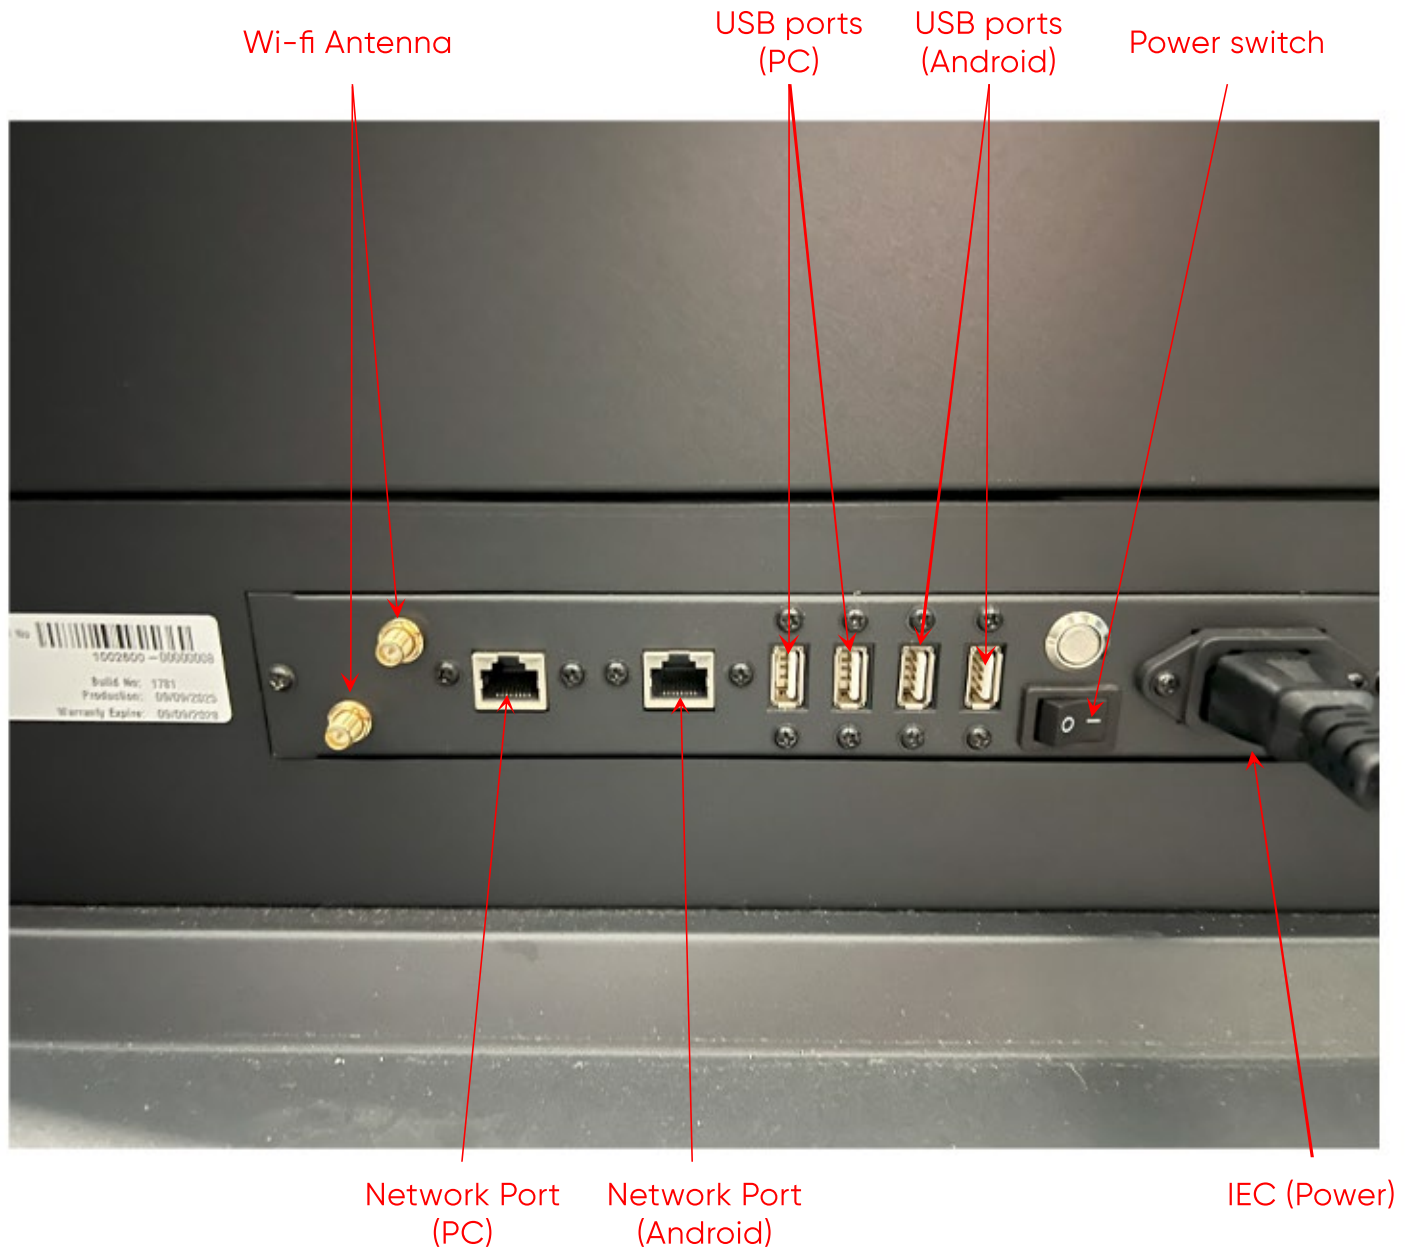

[promultis]

For more exciting multitouch products visit
www.promultis.info
or call +44 (0) 239 251 2794

